



## >> smart Media-System

Supplement

## Symbols

### **WARNING**

Warning notes make you aware of dangers which could pose a threat to your health or life, or to the health and life of others.

### **Environmental note**

Environmental notes provide you with information on environmentally aware actions or disposal.

 Notes on material damage alert you to dangers that could lead to damage to your vehicle.

 These symbols indicate useful instructions or further information that could be helpful to you.

▶ This symbol designates an instruction you must follow.

▶ Several consecutive symbols indicate an instruction with several steps.

(▷ This symbol tells you where you can find further information on a topic.

▷▷ This symbol indicates a warning or an instruction that is continued on the next page.

**Dis-**  
**play** This text indicates a message on the touchscreen

## Let the fun begin!

First of all, familiarise yourself with your smart media system. Read this Supplement, particularly the safety and warning notes, before you drive off. This will help you to obtain the maximum pleasure from your smart media system and avoid endangering yourself and others.

The equipment and functions of your smart media system may differ, depending on:

- model
- order
- country variant
- availability

smart is constantly updating its vehicles to the state of the art.

smart therefore reserves the right to introduce changes in the following areas:

- design
- equipment
- technical features

Your device may therefore differ from that shown in the descriptions in this Supplement.

The following are integral components of the vehicle:

- Owner's Manual
- Service Booklet
- Equipment-dependent supplements

Keep printed copies of the documents in the vehicle at all times. If you sell the vehicle, always pass the documents on to the new owner.

The technical documentation team at Daimler AG wishes you safe and pleasant motoring.

---

**Index** ..... 3

---

**Introduction** ..... 8

---

**At a glance** ..... 10

---

**Vehicle menu** ..... 19

---

**Navigation** ..... 23

---

**Multimedia menu** ..... 36

---

**Telephone** ..... 46

---

**Services menu** ..... 51

---

**Voice control system** ..... 56

---

**System menu** ..... 59

- A**
- Anti-theft protection** ..... 9
  - AUX** ..... 42
- B**
- Back function** ..... 16
  - Basic functions**
    - Favourites ..... 17
    - SD card ..... 17
    - Switching on/off ..... 15
    - Touchscreen ..... 15
  - Bluetooth®**
    - Settings ..... 50
  - Buttons on the multifunction steering wheel** ..... 10
- C**
- Centre console**
    - Controls ..... 12
  - Changing a route**
    - Calling up the menu ..... 26
  - Changing the route**
    - Avoiding part of the route ..... 27
    - Avoiding road blocks ..... 27
    - Calculating an alternative route ..... 26
    - Cancelling the route ..... 27
    - Guiding the route via waypoint .... 27
    - Minimising delays ..... 27
  - Confirming the selection**
    - Operating the touchscreen ..... 15
  - Connecting a phone**
    - Conditions ..... 47
  - Connecting a telephone**
    - Connecting a mobile phone for the first time (authorising) ..... 47
    - Connecting a new mobile phone (authorising) ..... 47
    - Deleting a mobile phone ..... 47
    - Establishing or terminating a Bluetooth® connection ..... 48
  - Context menu** ..... 16
  - Controls**
    - Buttons on the multifunction steering wheel ..... 10
    - Centre console ..... 12
    - smart media system ..... 11
  - Copyright** ..... 9
- D**
- DAB radio (Digital Audio Broadcasting)**
    - DAB radio services ..... 37
    - Introduction ..... 37
  - Declaration of conformity** ..... 8
  - Deleting favourites** ..... 18
  - Digital radio** ..... 37
  - Display mode**
    - Frequency display mode ..... 36
    - General notes ..... 36
    - List display mode ..... 36
    - Preset display mode ..... 37
  - During route guidance**
    - Enlarging the view at junctions .... 28
    - Information on the display ..... 28
    - Lane Assist ..... 28
    - Navigation messages ..... 28
    - Traffic information ..... 29
- E**
- eco score**
    - Calling up ..... 19
    - Comparing the trip ..... 19
    - Evaluating the current trip ..... 19
    - Preferred trips ..... 20
    - Renaming a category ..... 20
    - Resetting data ..... 20
    - Saving the trip ..... 19
  - Electromagnetic compatibility** ..... 8
  - Emergency call 999 or 112** ..... 46
  - Entering a destination**
    - Entering a destination by address ..... 23
    - Entering a destination using geo-coordinates ..... 25
    - Entering a destination using the map ..... 25
    - Entering a destination via Tom-Tom Places ..... 25
    - Entering a POI ..... 24
    - Overview ..... 23
    - Summary of planned route ..... 26

**Entering the destination**

- Selecting a destination from the list of last destinations ..... 24
- Selecting a saved destination ..... 24
- Selecting your home town as the destination ..... 24

**Entering the home address** ..... 34

**EPG (DAB)** ..... 37

**F****Favourites**

- Creating ..... 17
- Creating a new favourite ..... 17
- Deleting ..... 18
- General notes ..... 17

**Functions during playback**

- Bluetooth® audio playback ..... 40
- Playback of USB stick or SD card ... 39

**G**

**Guarantee** ..... 8

**H**

**Home screen** ..... 14

**I**

**i-Announcements (DAB)** ..... 38

**Increasing the scale of the map**

- Operating the touchscreen ..... 16

**Intellitext (DAB)** ..... 37

**M****Main menu**

- Multimedia menu ..... 13
- Navigation menu ..... 13
- Services menu ..... 13
- System menu ..... 13
- Telephone menu ..... 13
- Vehicle menu ..... 13

**Managing POIs**

- Adding a POI category ..... 33
- Adding POIs ..... 33
- Deleting a POI category ..... 33
- Deleting POIs ..... 33
- Editing POIs ..... 34

Issuing warning when POI is in vicinity ..... 33

**Media**

- Category list ..... 41
- Context menu ..... 40
- Functions during playback ..... 39
- Introduction ..... 38
- Notes on media mode ..... 38
- Searching for track ..... 40
- Starting the media playback ..... 39

**Moving the road map (map view)**

Operating the touchscreen ..... 15

**Multimedia menu**

- Pictures ..... 41
- Radio ..... 36
- Settings ..... 43
- Vehicle menu overview ..... 36
- Video ..... 41

**Multimedia menu settings**

- Balance/Fader ..... 43
- Bass/Treble ..... 43
- Media settings ..... 44
- Picture settings ..... 44
- Radio settings ..... 43
- Video settings ..... 45

**N****Navigation menu**

- Displaying a map ..... 29
- During route guidance ..... 28
- Entering a destination ..... 23
- Important safety notes ..... 23
- Overview of navigation menu ..... 23
- Planning a route ..... 26
- Problems with the navigation system ..... 35
- Settings ..... 32
- TomTom Services ..... 30

**Navigation menu settings**

- Advanced settings ..... 34
- Changing the map ..... 34
- Changing the map colours ..... 34
- Displaying POIs on the map ..... 33
- Managing POIs ..... 33
- Managing saved locations ..... 34
- Specifying a home address ..... 34

Switching the voice instructions on/off .....	32
Vehicle symbol .....	34
Voice .....	34
<b>Notes on media mode</b>	
Data structure of data carrier .....	38
Notes on copyright .....	39
Permissible bit and sampling rates .....	38
Permissible data carriers .....	38
Permissible formats .....	38

## O

<b>Operating safety</b> .....	8
<b>Operating the touchscreen</b>	
Confirming the selection .....	15
Gesture control for media playback .....	16
Increasing the scale of the map ....	16
Introduction .....	15
Moving the road map (map view) ....	15
Reducing the scale of the map .....	16
Selecting a menu item .....	15

## P

<b>Phone book</b>	
Introduction .....	48
Updating the phone book .....	49
<b>Phone menu settings</b>	
Activating/deactivating Bluetooth® .....	50
Downloading telephone data automatically .....	50
Managing devices .....	50
Voicemail configuration .....	50
Volume .....	50
<b>Pictures</b>	
Context menu .....	41
Functions during the image playback .....	41
Introduction .....	41
Starting image playback .....	41
<b>Problems with the navigation system</b> .....	35
<b>Proper use</b> .....	8

## R

<b>Radio</b>	
Context menu .....	37
Display mode .....	36
Switching to radio mode .....	36
<b>Route details</b>	
Calling up the menu .....	27
Displaying a map of the route .....	27
Displaying the destination .....	27
Displaying traffic information along the route .....	28
Showing directions .....	27
<b>Route planning</b>	
Carpool lanes .....	33
Changing the route .....	26
Ferry connections .....	32
Planning a route in advance .....	26
Route details .....	27
Route overview .....	33
Route types .....	32
Toll roads .....	32
Unpaved roads .....	32

## S

<b>Safety notes</b>	
Using the telephone .....	46
<b>SD card</b>	
Inserting an SD card .....	17
Introduction .....	17
Removing an SD card .....	17
<b>Selecting a menu item</b>	
Operating the touchscreen .....	15
<b>Selecting units</b>	
Displaying GPS coordinates .....	62
Units of measurement for distance .....	62
<b>Services menu</b>	
General notes .....	51
Installing apps .....	51
Overview of services menu .....	51
Settings .....	52
<b>Services menu settings</b>	
App Manager .....	52
Data sharing settings .....	53
TomTom Services .....	53
<b>Simulcast (DAB)</b> .....	38

<b>Slide show (DAB)</b> .....	37
<b>smart media system</b>	
Controls .....	11
<b>Sound settings</b>	
Switching Bass boost arkamys® on/off .....	43
<b>Starting the media playback</b>	
Automatic playback .....	39
Selecting the media source .....	39
<b>Status and information</b>	
Copyright .....	62
GPS status .....	62
Licences .....	62
Network status .....	62
Version information .....	62
<b>Switching on/off</b>	
Displaying temperature and time .....	15
Switching off .....	15
Switching on .....	15
<b>System menu</b>	
Changing the system language .....	59
Display settings .....	59
Factory settings .....	63
Keyboards .....	61
Overview of system menu .....	59
Removing the SD card .....	62
Safety warnings .....	61
Selecting the home screen .....	61
Selecting units .....	62
Setting the time .....	61
Sound settings .....	60
Status and information .....	62
<b>System menu settings</b>	
Alerts .....	60
Setting the time format .....	61
Setting the voice output .....	61
Setting the volume .....	60
Speed-dependent volume .....	60
Voice output settings .....	60

## T

**Telephone**

Function restrictions .....	46
Safety notes .....	46

**Telephone book**

Adding favourites .....	49
-------------------------	----

**Telephone menu**

"999" or "112" emergency call .....	46
Call history .....	49
Connecting a phone .....	47
Dialling a number .....	49
Function restrictions .....	46
General notes .....	46
Important safety notes .....	46
Overview of telephone menu .....	46
Phone book .....	48
Settings .....	50
Telephone operation .....	48
Voicemail .....	50

**Telephone operation**

During the call .....	48
Incoming call .....	48
Making a call .....	48

**To and from work**

Traffic information .....	31
---------------------------	----

**TomTom Services**

Introduction .....	30
My Services menu .....	51
Traffic information menu .....	30

**Touchscreen**

Back function .....	16
Confirming settings with Done .....	16
Context menu .....	16
Operating the touchscreen .....	15

**Traffic information**

Display during route guidance .....	29
General notes .....	29
Reading aloud .....	31
Settings .....	31
Showing traffic information details .....	29
To and from work .....	31

**Traffic information menu**

Displaying map of route .....	30
Displaying the traffic informa- tion along the route .....	30
Functions in traffic informa- tion menu .....	30
Minimising delays .....	30

## V

**Vehicle**

Data acquisition .....	8
------------------------	---

<b>Vehicle menu</b>	
eco score .....	19
Settings .....	20
Vehicle menu overview .....	19
<b>Vehicle menu overview</b> .....	19
<b>Vehicle menu settings</b>	
Activating/deactivating auto- matic door locking .....	21
Activating/deactivating eco score after a trip .....	22
Activating/deactivating the rear window wiper when revers- ing .....	21
Overview .....	20
Rear view camera .....	21
<b>Video</b>	
Context menu .....	42
Functions during playback .....	42
Introduction .....	41
Starting video playback .....	42
<b>Voice</b>	
Changing the voice .....	34
<b>Voice control system</b>	
Calling a contact from the phone book .....	57
Entering a destination in the navigation system .....	56
General notes .....	56
Help function .....	56
Problems with the voice control system .....	58
Starting an application .....	57
Using the voice control system .....	56

## General information

The smart sales organisation<sup>1</sup> provides a guarantee for the period of 24 months without kilometre limit for this accessory or replacement part.

## Operating safety

### Important safety notes

#### WARNING

Operating communications equipment integrated into the vehicle while driving will distract you from traffic conditions. You could then lose control of the vehicle. There is a risk of an accident.

Only operate these devices if road traffic conditions permit. If you are unsure about the surrounding conditions, pull over to a safe location and make entries only while the vehicle is stationary.

Observe the legal requirements for the country in which you are currently driving.

Bear in mind that, at a speed of only 50 km/h, your vehicle covers a distance of nearly 14 m per second.

 The functionality of a roof aerial (radio, DAB) may be impaired if roof carriers are used.

Attaching metallised retrofit film to the windscreen may affect radio and GPS reception and have a negative impact on all other aerials in the vehicle interior.

### Correct use

#### WARNING

Modifications to electronic components, their software as well as wiring could affect their function and/or the operation of other networked components. This could in particular also be the case for systems relevant to safety. They might not function

properly anymore and/or jeopardise the operational safety of the vehicle. There is an increased risk of an accident and injury. Do not attempt to modify the wiring as well as electronic components or their software. Always have work on electrical and electronic components carried out at a qualified specialist workshop.

If you make any changes to the vehicle electronics, the general operating permit is rendered invalid.

When using the device observe:

- the safety notes in this manual
- traffic rules and regulations
- laws and safety standards pertaining to motor vehicles

## Declarations of conformity

### Wireless vehicle components

The following information applies to all components of the vehicle and the information systems and communication devices integrated into the vehicle which receive and/or transmit radio waves:

 The components of this vehicle that receive and/or transmit radio waves are compliant with the basic requirements and all other relevant conditions of Directive 1999/5/EC.

For further information enquire at any smart centre.

### Electromagnetic compatibility

The electromagnetic compatibility of the vehicle components has been checked and certified according to the currently valid version of Regulation ECE-R 10.

## Data stored in the vehicle

A large number of your vehicle's electronic components can store data.

<sup>1</sup> The guarantor is the respective sales organisation in the country in which the accessory or replacement part was bought (see list in the Service Booklet).

The data memory temporarily or permanently stores technical information about:

- the vehicle's operating state
- events
- faults

The technical information generally documents the condition of a component, module, system or the environment.

These include, for example:

- The operating status of system components, e.g. fluid levels
- Status messages concerning the vehicle and its individual components, e.g. number of wheel revolutions/speed, deceleration in movement, lateral acceleration, accelerator pedal position
- Malfunctions and defects in key system components, including, for instance, lights, brakes.
- Vehicle reactions and operating conditions in special driving situations, including, for instance, deployment of an airbag, use of stability control systems.
- Environmental conditions, including, for instance, the outside temperature.

This data is of an exclusively technical nature and can be used to:

- assist in the detection and elimination of faults and defects
- analyse vehicle functions, e.g. after an accident
- optimise vehicle functions

If you have the vehicle serviced, this technical information can be read out from the event and fault data memory.

Services include, for example, information on:

- repair work
- service work
- warranty claims
- quality assurance

The readout is handled by service network staff (including the manufacturer) with the help of special diagnostic testers. You can obtain more detailed information, if required.

After the fault has been rectified, the information is cleared in the fault memory or is sequentially overwritten.

During vehicle operation, certain situations may arise in which this technical data - in conjunction with other information and, if applicable, after consultation with an approved assessor - may be linked to an individual person.

Examples of this include:

- accident reports
- vehicle damage
- evidence

Additional functions that have been contractually agreed upon with the customer also make it possible to transmit particular vehicle data from the vehicle. These additional functions include, for instance, a vehicle locating feature in the event of emergencies.

### Copyright information

### Free and open source software

Information on licences for free and open-source software used in your vehicle and its electronic components is available on the following website: <http://www.smart.com/opensource>.

### Protection against theft

This device is equipped with technical measures to protect it against theft.

Further information on protection against theft can be obtained from your smart center.

### Function restrictions

For safety reasons, some functions are restricted or unavailable while the vehicle is in motion.

You can recognise this, for example, by the fact that:

- certain menu items cannot be selected or
- functions are exited

## Buttons on the multifunction steering wheel

&gt;&gt; At a glance.



	Function	Page
①	Activates/deactivates the voice control system Accepts/rejects a call	56 48
②	<input type="button" value="+"/> Increases the volume	

	Function	Page
③	<input type="button" value="-"/> Decreases the volume	
④	smart Media-System	11

## Controls

## smart Media-System



P82.89-0897-31


&gt;&gt; At a glance.

	Function	Page
①	Depending on the function selected: Previous station (radio mode) Previous track (media mode) Press and hold: rewind (media mode)	
②	Mute To cancel traffic announcements	
③	Depending on the function selected: Next station (radio mode) Next track (media mode) Press and hold: fast forward (media mode)	

	Function	Page
④	To switch to the home screen	14
⑤	Press: to activate/deactivate the smart Media-System Turn: to adjust the volume	
⑥	Touchscreen	15


>> At a glance.

Centre console

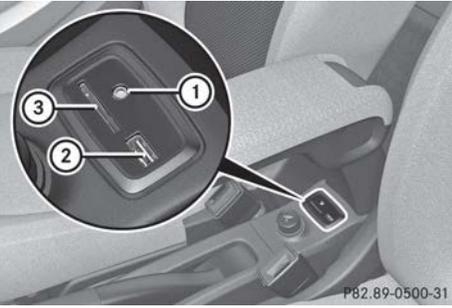

	Function	Page
①	AUX port	
②	USB port for media and iPod™	39
③	Slot for SD card	39

## Main menu

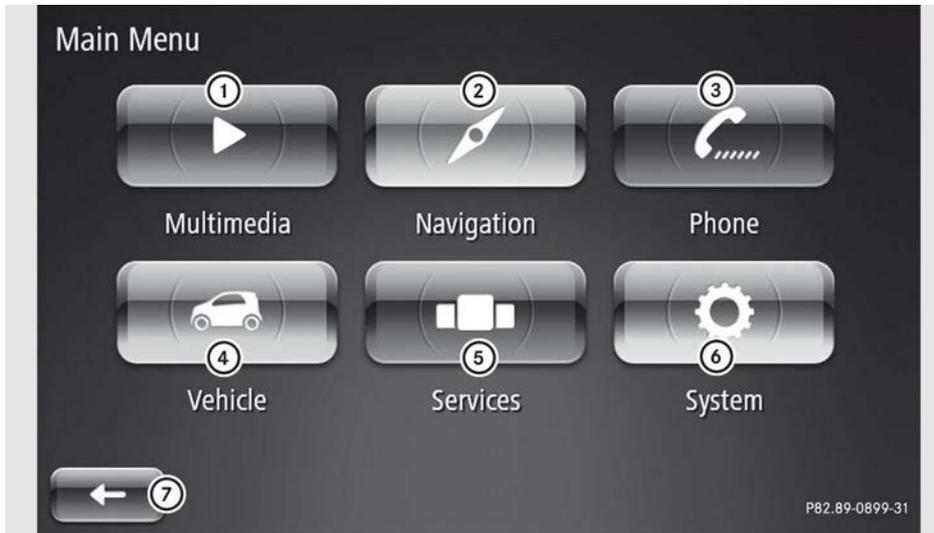

&gt;&gt; At a glance.

Function	Page	Function	Page
① <b>Multimedia menu</b>		⑤ <b>Services menu</b>	
Radio	36	TomTom Services	51
Media	38	Settings	53
Pictures	41	Applications (optional)	51
Video	41	MirrorLink™	
Settings	43	⑥ <b>System menu</b>	
② <b>Navigation menu</b>		Language	59
Destination	23	Display	59
Changing the route	26	Sound	60
Displaying a map	29	Time	61
Itineraries	26	Safety warnings	61
TomTom Services	51	Home screen	14
Settings	32	Keyboards	61
③ <b>Phone menu</b>		Selecting units	62
Phone book	48	Status & Information	62
Call logs	49	Removing an SD card	62
Dial number	49	Factory reset	63
Voice mail	50	⑦ 	
Settings	50	Exit the menu	
④ <b>Vehicle menu</b>			
eco score	19		
Settings	20		

## Home screen



- i** You can set the home screen display (> page 61).  
Directly access the corresponding menu by tapping on a window or display.

	Function	Page
①	Media playback/radio display	36
②	Status indicator of the mobile phone and field strength of the mobile phone network Go directly to the telephone menu	46
③	Outside temperature display Go directly to the TomTom Service "Weather" (if available)	15

	Function	Page
④	Time Go directly to time setting	15
⑤	Traffic announcements along planned route	29
⑥	Map	29
⑦	Next navigation manoeuvre	28
⑧	Calls up the context menu	16
⑨	Calls up the Favourites menu	17
⑩	Calls up the main menu	
⑪	eco score	19

## Basic functions

## Important safety notes

## ⚠ WARNING

Operating the integrated information systems and communications equipment in the

vehicle while driving will distract you from traffic conditions. You could then lose control of the vehicle. There is a risk of an accident.

Only operate these devices if road traffic conditions permit. If you are unsure about

the surrounding conditions, pull over to a safe location and make entries only while the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the system.

### Switching the smart Media-System on and off

#### Priming

- ▶ **To switch on automatically:** start the engine.
- ▶ **To switch on manually:** press the  button.

#### Switching off

- ▶ **To switch off automatically:** switch off the ignition and open the driver's door.
- ▶ **To switch off manually:** press the  button.

#### Switching off the display

- ▶ On the home screen, select ( page 14)  → **Switch off display.**

#### Displaying temperature and time

When the driver's door is opened, the time and outside temperature will be shown in the display.


### Touchscreen

#### Operating the touchscreen

##### Introduction

The following is an example of the basic functions for operating the touchscreen.

#### Selecting a menu item

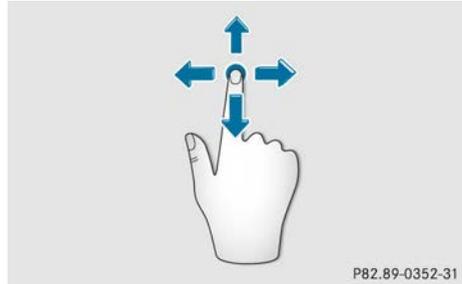

- ▶ Touch the touchscreen with your finger.
- ▶ Swipe your finger to the left, to the right, up or down.  
The selection on the display will then move in the respective direction.


You can scroll through long lists or menus in this way.

#### Confirming the selection




- ▶ Tap the touchscreen with your finger.  
A menu, option or application will start.

#### Moving the road map (map view)

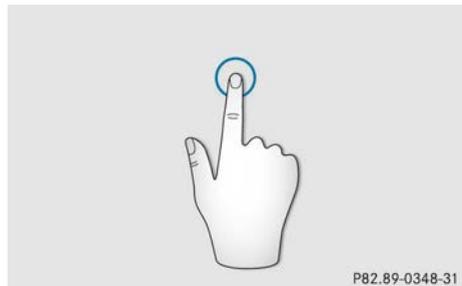


- ▶ Press on the centre of the touchscreen with one finger.

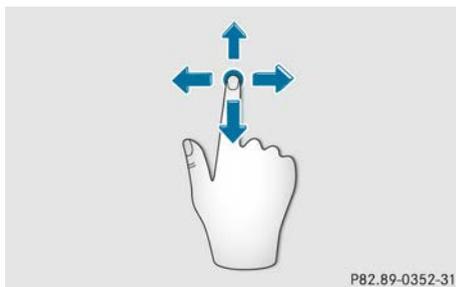


- ▶ Swipe your finger in any direction. The map will then move in the respective direction.

### Increasing the scale of the map (all map views)

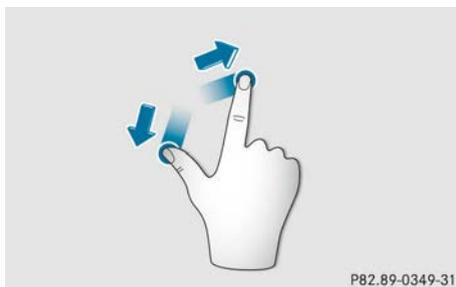

- ▶ Place two fingers slightly apart in the middle of the touchscreen.
- ▶ Move your fingers away from each other. The map scale is then magnified.

### Reducing the scale of the map

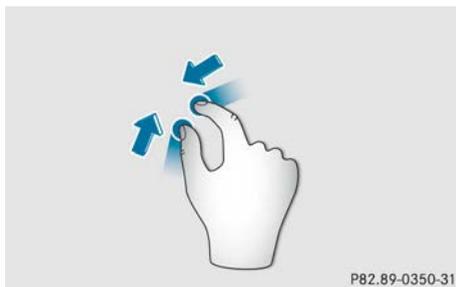

- ▶ Place two fingers, at a greater distance apart, on the screen.
- ▶ Pull your fingers towards each other. The map scale is then reduced.

### Gesture control for media playback

You can use gesture control to play audio and video media, to display image data and for radio mode.



Example of gesture control when playing media:

- ▶ Swipe your finger to the right. Playback starts again from the beginning or the previous track is played.
- ▶ Swipe your finger to the left. The next track is played.

### Context menu

If there are further functions possible for the application displayed, the  symbol will be shown in the lower right-hand corner of the screen. The context menus are adapted to the current application.

- ▶ **To call up the context menu:** select .
- A list of functions for the current application will be shown.

### Back function

If it is possible to return to a previous display in an application or menu, the  symbol will be shown in the lower left-hand corner.

- ▶ **To return to the previous display:** select .

### Confirming settings with "Done"

If you change a setting in a menu, you will need to select **Done** to apply the new setting.

## SD card

### Introduction

#### WARNING

SD memory cards are small parts. They can be swallowed and cause asphyxiation. This poses an increased risk of injury or even fatal injury.

Keep SD memory cards out of the reach of children. If an SD memory card is swallowed, seek immediate medical attention.

An SD card, to which the map data from the navigation system can be saved, is included in the scope of delivery. Regular updates will be offered for the map data. This is done by installing the corresponding update software on your computer. Then carry out the relevant steps to update the card. For further information enquire at any smart centre.

You may replace the SD card containing map data from the navigation system with an SD card that has a maximum storage capacity of 64 GB.

-  Only use the SD card in conjunction with the smart media system or for updating map and system data on the computer. Otherwise, the data saved to the SD card may be destroyed.

### Inserting an SD card

- ▶ Insert the SD card into the appropriate slot in the centre console and press until it engages.
- ▶ Switch on the device.  
The SD card will be recognised by the smart media system and will be ready for operation.

### Removing an SD card

- ▶ In the main menu, select **System** → **Remove SD-card** (▷ page 62).  
A display message for removing the card appears.

or

- ▶ On the home screen, select  → **Remove SD-card** (▷ page 14).

- ▶ Confirm the message to remove the card with **Yes**.
- ▶ Press on the SD card in the slot.  
The SD card disengages and emerges from the slot.
- ▶ Remove the SD card from the slot.

## Favourites

### General notes


You can create and call up favourites for the following categories:

- Navigation
- Multimedia (FM radio)
- Telephone
- Services (if available)

### Creating favourites



- ▶ On the home page, select **Favourites** menu .

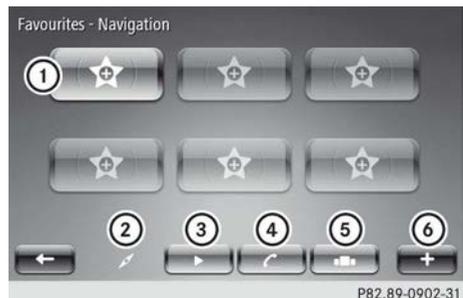

- ▶ Select one of the categories **Navigation** ②, **Radio** ③, **Handset** ④ or **Services** ⑤.
- ▶ Select an empty memory position ① or tap **+** ⑥ and select **Add Favourite**.
- ▶ Select a favourite from the list displayed.

The favourites can also be created in the respective menus:

- ▶ Tap **+** ⑥ and select **Add Favourite**.

**i** If adding a favourite to the Navigation list, you must have at least one address saved.

### Deleting favourites

---

- ▶ On the home page, select the **Favourites** menu.
- ▶ Tap **+** and select **Remove a Favourite**.
- ▶ Select the favourite you wish to remove and confirm with **Delete**.

or

- ▶ Tap **+** and select **Remove all Favourites**.

## Vehicle menu overview



In the vehicle menu, you can call up eco score and make changes to the vehicle settings.

## eco score

### Calling up eco score

The eco score function provides feedback on how economical your driving style is. The eco score function assists you in achieving the most economical driving style for the selected settings and prevailing conditions. Consumption can be significantly influenced by your driving style. Further information regarding eco score can be found in the vehicle Owner's Manual.

- ▶ In the main menu, select **Vehicle** → **eco score**.

or

- ▶ If the eco score display is shown on the home screen tap on the eco score symbol. The eco score **Current trip** function will be shown.

### Evaluating the current trip



- ▶ In the **eco score** menu, select → **Current trip**.

The eco score rating will be shown and comprises:

- Bar graphs for **accelerate**, **anticipatory** and **shift** (vehicles with manual transmission)
- Bar graphs for **accelerate**, **anticipatory** (vehicles with automatic transmission)
- Distance covered
- Total eco score as a percentage
- ▶ **To switch the eco score on or off after the trip:** select **[+]** → **Hide eco score after trip** or **Show eco score after trip**.

### Saving the current trip




- ▶ In the **Current trip** screen, select → **Save**.  
A list of categories will be shown, such as **Home-Work** or **Vacation**.
- ▶ Select the desired category.  
The values for the current trip will be added to the category selected and the current trip reset. In the instrument cluster, the trip computer values will be returned to "From reset".

### Comparing the current trip

You can compare the values for the current trip with those saved for a trip in one of the categories.

- ▶ In the **Current trip** screen, select **[+]**.
- ▶ Select **Compare**.  
A list of categories will be shown, such as **Home-Work** or **Vacation**.
- ▶ Select the desired category.  
A comparison of the values for the current trip with the values from the category selected is shown.

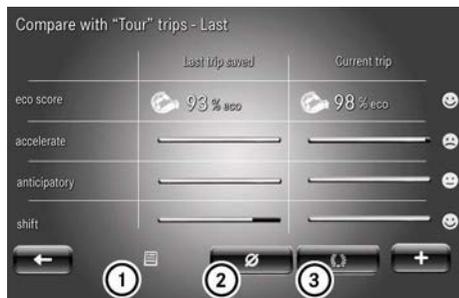

- ① Last trip saved in the category
  - ② Average value for the category
  - ③ Best trip in the category
- ▶ Compare the current trip with values ①, ② or ③ in the category.  
The emoticons on the right-hand side symbolise whether the values for the current trip are better, the same or worse.

### Resetting data

- ▶ In the screen for the current trip, select **Reset**.  
A confirmation message will appear in the display.
- ▶ Select **Yes** to reset or select **No** to cancel.  
The data for the current trip will be reset. In the instrument cluster, the trip computer values will be returned to "From reset".

### Preferred trips

#### Displaying the eco score

If you have saved a trip, you can track the progress of the eco score for this distance.

- ▶ In the main menu, select **Vehicle** → **eco score** → **My preferred trips**.

You can display four different eco score values for the categories:

- Summary
- Last value
- Average value
- Best value

For the category **Last trip saved**, you can choose between a summary or a detailed report.

#### Renaming a category

You can rename a category. To do this, you must have saved at least one trip in the respective category.

- ▶ In the main menu, select **Vehicle** → **eco score** → **My preferred trips** → and the respective category.
- ▶ Select **[+]** → **Rename this category**.

#### Resetting the eco score of one category

You can delete the eco score of all journeys of one category.

- ▶ In the main menu, select **Vehicle** → **eco score** → **My preferred trips** → and the respective category.
- ▶ Select **[+]** → **Reset this category**

## Settings

### Overview

You can change the following settings in the settings menu:

- Set the rear view camera
- Activate/deactivate automatic door locking
- Activate/deactivate the automatic rear window wiper when reversing
- Activate/deactivate the eco score display after a trip




- ▶ **To call up the menu:** in the main menu, select **Vehicle** → **Settings**.


### Rear view camera

You may activate/deactivate the functions of the rear view camera and change the view settings.

- ▶ In the main menu, select **Vehicle** → **Settings** → **Rear view camera**.
- ▶ **To activate/deactivate the rear view camera functions:** select **Rear view camera settings**.

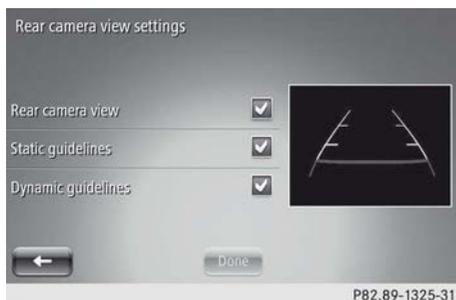

- ▶ Select the rear view camera functions that are to be changed.  
You can select:
  - Show/hide rear camera view
  - Show/hide static guidelines
  - Show/hide dynamic guidelines
 The changed function will be shown directly in the rear camera view.
- ▶ Confirm the selection with **Done**.
- ▶ **To change the image settings:** select **Image settings**.  
An overview of the image settings will be shown.

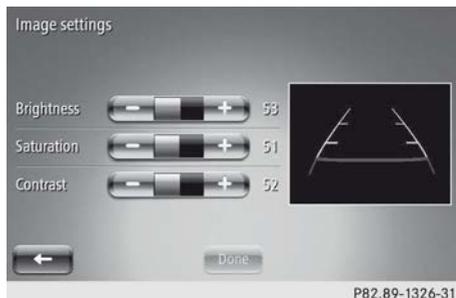

- ▶ Adjust the values for **Brightness**, **Saturation** and **Contrast**.
- ▶ Confirm the image settings with **Done**.  
The changed function will be shown directly in the rear camera view.

### Activate/deactivate automatic door locking

If the ignition is switched on and the vehicle is travelling at a speed greater than 7 km/h, the doors will automatically lock. You can switch this function on and off.

- ▶ In the main menu, select **Vehicle** → **Settings** → **Door auto lock while driving**.  
The enabled function is indicated by a tick.
- ▶ Confirm the new setting with **Done**.

### Activating/deactivating the rear window wiper when reversing

The rear window wiper briefly wipes automatically if you engage reverse gear while the ignition and the windscreen wipers are on. You can switch this function on and off.

- ▶ In the main menu, select **Vehicle** → **Settings** → **Auto rear wipe with reverse gear**.  
The enabled function is indicated by a tick.
- ▶ Confirm the new setting with **Done**.

### Activating/deactivating eco score after a trip

When the engine is switched off, the eco score display will appear on the screen. You can switch this function on and off.

- ▶ In the main menu, select **Vehicle** → **Settings** → **Hide eco score after trip** or **Show eco score after trip**.  
The enabled function is indicated by a tick.
- ▶ Confirm the new setting with **Done**.

## Important safety notes

### WARNING

Operating the integrated information systems and communications equipment in the vehicle while driving will distract you from traffic conditions. You could then lose control of the vehicle. There is a risk of an accident.

Only operate these devices if road traffic conditions permit. If you are unsure about the surrounding conditions, pull over to a safe location and make entries only while the vehicle is stationary.

When using the navigation mode, you must observe the legal requirements for the country in which you are currently driving. Always observe road and traffic rules and regulations during your journey. Road and traffic rules and regulations always have priority over the navigation system's driving recommendations.

### WARNING


SD memory cards are small parts. They can be swallowed and cause asphyxiation. This poses an increased risk of injury or even fatal injury.

Keep SD memory cards out of the reach of children. If an SD memory card is swallowed, seek immediate medical attention.

## Navigation menu overview

In the navigation menu, the following functions may be carried out:

- Entering a destination
- Changing the route
- Displaying a map
- Planning a route
- Calling up TomTom Services
- Changing navigation settings

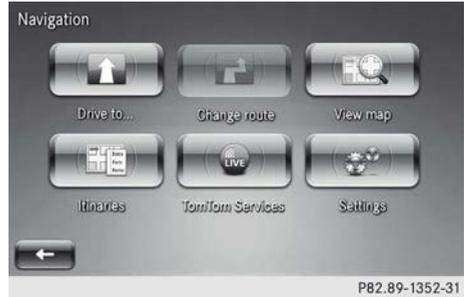

- ▶ In the main menu, select **Navigation**.

## Entering a destination

### Overview

Examples of how you can enter an address:

- Address with country, city or postcode
  - Street and house number
  - Selecting a city centre
  - Selecting a junction
- Home town
- Destination saved
- Last destination
- Point of interest (POI)
- Destination on the map
- Geo-coordinates

### Entering a destination by address

You can enter a full address or just parts of one to specify your destination.

- i** If you are using the navigation system for the first time, you will be asked to enter the country of destination.

- ▶ **To change a country when entering a destination:** select the country's flag symbol.

- ▶ In the main menu, select **Navigation** → **Drive to...** → **Address**.

A keypad will be displayed on the screen.



- ▶ If necessary, select the country using the national flag symbol on the top right of the display.

You can enter the city or postcode using this keypad.

When entering the destination, an alphabetical list with suggestions will be shown. If **List** is selected, the entire list will be shown.

- ▶ Select the destination from the list.
- ▶ In the same way, select the **Street** and **House number** and confirm with **Done**.

To specify the destination, it must be saved on the digital map.

- i** The navigation system saves the last destinations entered. Any new destination entered is placed at the top of the list.

Before you set the destination, you can also call up the following functions using the context menu:

- ▶ **To specify a car park near the destination:** select **+** → **Car park nearby**.  
A list of car parks near the current destination is shown.
- ▶ **To display information:** select **+** → **Show information**.
- ▶ **To add to the saved destinations:** select **+** → **Save position**.  
The current location is added to the saved destinations.

### Selecting your home town as a destination

If **Home** is selected as the destination, route guidance is started for the home town saved.

In the **Preferences** menu of the navigation system, you can change the home town saved (> page 34).

- ▶ In the main menu, select **Navigation** → **Drive to...** → **Home**.

### Selecting a saved destination

When you select **Saved Locations** as a destination, you can choose a destination from one you have used before. If there is no destination saved, this function cannot be selected.

In the **Preferences** menu of the navigation system, you can manage the destinations saved (> page 34).

- ▶ In the main menu select **Navigation** → **Drive to...** → **Saved locations**.  
A list of the saved destinations appears.
- ▶ Select the destination.

### Selecting a destination from the list of last destinations

Selecting the **Recent destinations** menu allows you to choose from one of the recently entered destinations.

The last destinations in the **Recent destinations** menu are automatically managed by the system.

- ▶ In the main menu, select **Navigation** → **Drive to...** → **Recent destinations**.  
A list of the last destinations appears.
- ▶ Select the destination.

### Entering a POI

If you select the **Point of interest** menu, you may choose a POI in the vicinity of a location. POIs are divided into categories, e.g. museums, restaurants or car parks.

- ▶ In the main menu, select **Navigation** → **Drive to...** → **Point of interest**.  
In the display, a selection of locations appears that can be used to search for a POI.
- You can select:
  - **Near my location**: the navigation system searches for POIs near the vehicle's current location.
  - **Along route**: the navigation system searches for POIs located along the planned route.
  - **Near destination**: the navigation system searches for POIs near the destination.
  - **Near Home**: the navigation system searches for POIs near the home town saved.
  - **In city**: the navigation system searches for POIs near a city. The city can be freely selected.
- ▶ Select a location for the search.  
A selection of POI categories will be displayed.

You can select:

- a selection of categories for POIs, such as a filling station or restaurant
- a POI name search
- a POI search within a category
- ▶ Select the POI category and the POI.

### Entering a destination using the map

If you select the **Point on map** function, you can select a point on the map as a destination.

- ▶ In the main menu, select **Navigation** → **Drive to...** → **Point on map**.  
A map will be displayed on the screen.



- ▶ Move, enlarge or reduce maps (▷ page 15).
- ▶ Tap the destination point on the display.  
The symbol selected is highlighted in blue.  
Tap on the symbol to confirm.

### Entering a destination via TomTom Places

By selecting the **TomTom Places** menu, you can select a POI which is saved in the TomTom Places database. These POIs include, for example, shops, restaurants or tourist sights.

- ▶ In the main menu, select **Navigation** → **Drive to...** → **TomTom Places**.  
In the display, a selection of locations appears that can be used to search for a POI.
- ▶ Select the place to search for and enter a search term.

### Entering a destination using geo-coordinates

If you select the function **Latitude Longitude**, you can enter the destination using its geo-coordinates.

- ▶ In the main menu, select **Navigation** → **Drive to...** → **Latitude Longitude**.  
A keypad will be displayed on the screen.
- ▶ Enter the geo-coordinates with longitude and latitude.

### Summary of planned route

Once you have selected a destination, the route to the destination will be calculated. In the display, a summary of the route will be displayed. By default, the quickest route will be calculated for route planning. Further information on route planning settings (> page 32).

Traffic information is included. This takes live traffic information into account when planning the route. The LIVE function requires a TomTom Services subscription (> page 30).



- ▶ **To start route guidance:** select **Choose a category**.
- ▶ **To display the route details:** select **+** → **Route details**.  
A selection of functions for the planned route will be shown (> page 27).
- ▶ **To change the route:** select **+** → **Change route**.  
You may enter a different destination.
- ▶ **To save a route:** select **+** → **Save route**.  
The route will be added to the saved routes.

**i** If you do not confirm the route with **Choose a category**, route guidance will start automatically after approximately ten seconds.

## Planning a route

### Planning a route in advance

All you need to plan a route is your starting point, at least one way point and a destination.

- ▶ In the main menu, select **Navigation** → **Itineraries**.
- ▶ To select the starting point of the route, proceed in the same way as you would when entering a destination (> page 23).
- ▶ Enter the route destination.
- ▶ Enter at least one way point for the route.
- ▶ Enter the route name and save the route.
- ▶ **To start navigation using a saved route:** select the desired route.
- ▶ Select **+** → **Start**.

### Changing the route


#### Calling up the menu

If a route has already been planned, the **Change route** function can be selected.

- ▶ In the main menu, select **Navigation** → **Change route**.  
The menu for changing the planned route will be displayed.

or

- ▶ During navigation, on the touchscreen, select **+** → **Change route**.

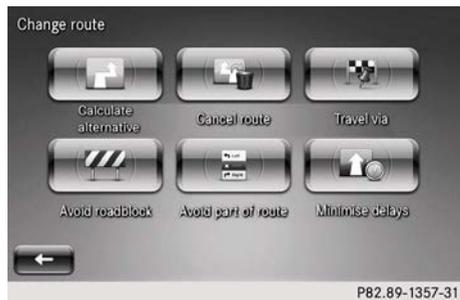

#### Calculating an alternative route

The navigation system calculates a new route that takes you on different roads.

- ▶ Select **Calculate alternative**.  
An alternative route is calculated and displayed.
- ▶ Select the alternative route or a previous one.

## Canceling the route

The navigation system ends the current route guidance. You can continue the route guidance by selecting the destination from **Recent destinations**.

- ▶ Select **Cancel route**.

## Route guidance via way point

You can map the route yourself by entering up to four way points.

- ▶ Select **Travel via**.  
If you have already entered a way point, a list of the saved way points will be displayed.
- ▶ Select **Add** and select a new way point from **Address**, **Recent destinations**, **Saved locations** or **TomTom Places** or **Point of interest**. Then proceed as described for entering a destination (▷ page 23).  
The new way point will be added to those already saved.

or

- ▶ Select a way point from the list of saved way points.

## Avoiding road blocks

If you become aware of a road block or traffic jam up ahead, you can make changes to your route.

- ▶ Select **Avoid roadblock**.
- ▶ Select the length of the route that needs to be avoided.  
Taking this detour into consideration, the route will be recalculated.

## Avoiding part of the route

You can plan a route in such a way that certain parts are not used. This function can be used, for example, if you wish to avoid a specific street due to traffic disruptions.

- ▶ Select **Avoid part of route**.
- ▶ A list of the streets used in the current route will be displayed.
- ▶ Select the street that you wish to avoid.  
The route will be recalculated.

## Minimising delays


The route can be recalculated according to current traffic information. This will enable you to avoid traffic disruptions and minimise delays. Traffic information is not available in all countries and regions (▷ page 29).

- ▶ Select **Minimise delays**.
- ▶ An overview of the traffic disruptions along the route will be shown.
- ▶ Select the traffic disruption you wish to avoid.  
The route will be recalculated.

## Route details

### Calling up the menu

Before starting route guidance, the details of the planned route can be displayed.

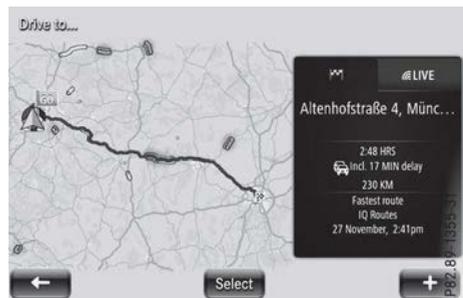

- ▶ Select **[+] Route details**.  
A selection of functions for the planned route will be shown.

## Displaying instructions

You can display an overview of the route with the corresponding directions.

## Displaying a map of the route

This function can be used to display the route on a two-dimensional map.

## Displaying the destination

With this function, the destination is shown on the map. Using the **[+]** context menu, you can then search for a car park near the destina-

tion or add the position to the saved destinations.

### Displaying the traffic information along the route

This function can be used to display traffic disruptions along the route. In order to avoid these disruptions, you can plan a different route.

Traffic information is not available in all countries and regions (▷ page 29).

### Displaying the summary


With the **Summary** function, the details of a route are shown again.

## During route guidance

### Navigation messages

Navigation messages should guide you during the journey without distracting you from traffic conditions or driving. Always use this function as a guide instead of the map display. The symbols or the map display could distract you from traffic conditions and driving.

### Information on the display

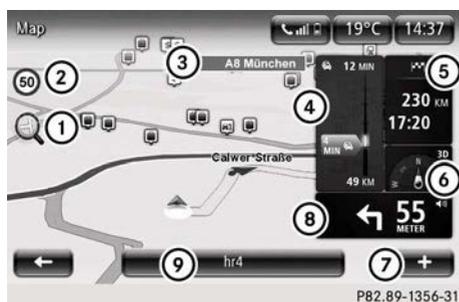

- ① Zooms in/out of the map view
- ② Displays the maximum permitted speed
- ③ Name of the next main road or information about the next street sign
- ④ Traffic information
- ⑤ Route information
- ⑥ Compass and symbol for two or three-dimensional map display

- ⑦ Context menu
- ⑧ Next navigation manoeuvre with distance and symbol for volume adjustment
- ⑨ Information about current radio or media playback or information about active telephone calls

- ▶ **To zoom the map in or out:** tap symbol ①.
- ▶ **To switch between the two and three-dimensional map view:** tap symbol ⑥.
- ▶ **To show traffic information details:** tap traffic information ④.
- ▶ **To display the whole route view with information on destinations and TomTom LIVE information:** tap ⑤.
- ▶ **To repeat the last spoken navigation command:** tap ⑧.

**i** The display of the maximum permissible speed is only an aid. The values are based on map data and are not always displayed correctly. Traffic signs always have priority over the display of maximum permissible speed in the smart Media-System.

### Lane Keeping Assist

Shortly before navigating a motorway junction or exit, the display will show a three-dimensional representation of the lanes and the exit.

**i** Lane Keeping Assist is not available for all junctions in all countries.

You can deactivate the Lane Keeping Assist display (▷ page 34).

### Enlarging the view at junctions

As you approach a junction, the size of the area viewed in the navigation system will increase. This enables you to following the turning manoeuvre more accurately.

You can deactivate the junction zoom function (▷ page 34).

## Traffic information

### General notes

Traffic information can be received in a number of ways:


- Traffic announcements (RDS/TMC)
- HD Traffic (a TomTom Live Service, subject to a fee)

LIVE Services are not available in all countries or regions, and not all LIVE Services are available in all countries or regions. You may be able to use the LIVE Services when traveling abroad. For further information enquire at any smart centre.

### Display during route guidance

During route guidance, traffic information is shown for the route ahead.

When disruptions occur in quick succession, only the disruption immediately following can be fully viewed.

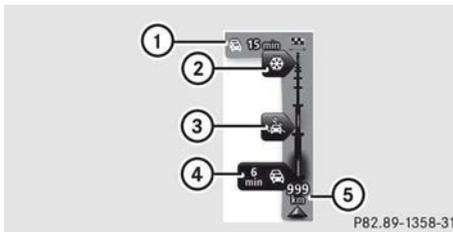

Example of traffic information

- ① Overall delay on route
- ② Traffic disruption (packed snow)
- ③ Traffic disruption (rain)
- ④ Traffic disruption (traffic jam)
- ⑤ Current position and distance to next traffic disruption

The traffic disruptions shown have different meanings, depending on their colour.

Colour	Meaning
Grey	Unknown or unexplained situation
Orange	Slow-moving traffic
Red	Traffic jam
Dark red	Standstill or road blocked

## Showing traffic information details

You can call up more detailed information about the delays along your route.

- ▶ During route guidance, tap the traffic information display (▷ page 28). Details regarding the next traffic disruptions along the route will be shown.
  - ▶ Switch between the traffic reports using or .
- or
- ▶ Swipe your finger right or left on the touchscreen message.

## Displaying a map

With the **View map** function, a two-dimensional map can be shown in the display.

The map shows your current position, as well as a number of other elements, such as Favourites and POIs.

**i** Displaying the traffic information is not a standard setting. You must use the context menu to select this function.

- ▶ In the main menu, select **Navigation** → **View map**.  
A map of the surrounding area will be shown.



- ▶ **To increase/reduce the scale or move the map:** see basic functions (▷ page 15).

or

- ▶ Tap the magnifying glass symbol.

- ▶ **To search for something on the map:** select **Find**.

- ▶ Proceed as you would when entering a destination (▷ page 23).
- ▶ **To show information on the map:** select  **Change map information.**

The following information or symbols can be shown on the map:

- Traffic information
- Names
- Points of interest (POIs)
- Satellite images
- Coordinates

The selected settings are indicated by a tick.

## TomTom Services

### Introduction

The TomTom Services menu can be used to display traffic information, or to call up and manage other TomTom Live Services. TomTom Live Services require a subscription and are subject to a charge. Various services come pre-installed and, following activation, can be used free of charge for a period of three years (▷ page 51).

- ▶ In the main menu, select **Navigation** → **TomTom Services.**



### My Services menu

With the **My Services** function, you can check your TomTom Services subscription status.

- ▶ In the main menu, select **Navigation** → **TomTom Services** → **My Services.**

The services available on the device and their subscription status will be shown.

### Traffic information menu

#### Functions in the traffic information menu

In the traffic information menu, you can search for information on current traffic conditions or carry out actions relating to the situation. If you have subscribed to the TomTom Traffic service, the menu will be called HD Traffic.

#### Minimising delays

During route guidance, you can recalculate the route with the function **Minimise delays**, which will take any reported traffic disruptions into consideration.

- ▶ In the main menu, select **Navigation** → **TomTom Services** → **Traffic** → **Minimise delays.**

#### Displaying traffic information along the route

During route guidance, you can use the function **Display traffic information along route** to display any traffic disruptions. You can also activate this function by tapping on the traffic information display (▷ page 28).

- ▶ In the main menu, select **Navigation** → **TomTom Services** → **Traffic** → **Display traffic info on route.**

Details regarding the next traffic disruption along the route will be shown.

- ▶ Switch between the traffic reports using  or .

or

- ▶ Swipe your finger right or left on the touchscreen message.

#### Displaying a map

This function can be used to display any traffic disruptions in the vicinity.

- i** Displaying the traffic information is not a standard setting. You must use the context menu  to select this function.

- ▶ In the main menu, select **Navigation** → **TomTom Services** → **Traffic** → **View map**.

A map of the surrounding area will be shown. The map will display symbols that represent traffic disruptions.



- ① Traffic jam
- ② Road blocked
- ③ Traffic disruption
- ④ Construction site
- ⑤ One or several lanes blocked
- ⑥ Accident
- ⑦ Traffic disruption avoided using the traffic information
- ⑧ Fog
- ⑨ Wind
- ⑩ Snow
- ⑪ Black ice
- ⑫ Rain

- ▶ **To display detailed information about a traffic disruption:** tap on the traffic report symbol.

### Traffic information settings

In the menu **Traffic settings**, you can determine how the traffic announcements are given during route guidance.

- ▶ In the main menu, select **Navigation** → **TomTom Services** → **Traffic** → **Traffic settings**.

You can choose from among the following functions:

- Always change to this route  
The navigation system automatically changes the route if a faster route has been calculated due to a traffic announcement.
- Request confirmation for route  
If a faster route has been calculated due to a traffic announcement, the navigation

system will request confirmation of this. You may then select this route.

- Never change my route  
The navigation system will not change the route, even if a traffic announcement has been made.

### Traffic information to and from work

In the **Disp. route to work** menu you can request the traffic report for one of your saved routes. This function is useful for checking the traffic situation when travelling to and from work.

- ▶ In the main menu, select **Navigation** → **TomTom Services** → **Traffic** → **Disp. route to work**.

- ❗ The home town address for work must not be identical to the home town address saved to the **Settings** menu (> page 34).

You can choose from among the following functions:

- Home to work  
You can call up traffic information for the route from the stored home address to the stored work address.
- Work to home  
You can call up traffic information for the route from the stored work address to the stored home address.
- Change the home to work route  
You can specify the home address and the final work destination.

### Reading aloud traffic information

In the menu **Read aloud traffic information**, you can have the traffic announcements for the current route read aloud.

- ▶ In the main menu, select **Navigation** → **TomTom Services** → **Traffic** → **Read aloud traffic information**.

The navigation system reads out the first traffic warning that appears on your route.

## Settings

### Switching voice instructions on/off

You can switch the voice instructions for the navigation system on or off. Information such as traffic reports and warnings will still be played even if the voice instructions have been deactivated.

- ▶ In the main menu, select **Navigation** → **Settings** → **Turn off voice guidance** or **Turn on voice guidance**.

### Route planning

#### Route types

You can set the type of route that is to be used as the default route.

- ▶ In the main menu, select **Navigation** → **Settings** → **Route planning** → **Route types**

You can select:

- Ask for every route: for every route planned, you will be asked which route type you wish to use.
- Always plan the fastest route: the route with the shortest driving time will always be used. You may also activate the option "Always avoid motorways". The navigation system will make sure there are no motorways included along the route.
- Always plan eco routes: the route with the lowest fuel consumption is always used.
- Always plan the shortest route: the route with the shortest distance is always used.
- ▶ Select one of the settings for the route type.

#### Toll roads

You can determine the settings for toll roads when planning a route.

- ▶ In the main menu, select **Navigation** → **Settings** → **Route planning** → **Toll roads**.

You can select:

- Prompt for toll roads on route: for every route planned, you will be asked whether a toll road should be included.
- Always avoid toll roads: when planning a route, toll roads will be avoided where possible.
- Never avoid toll roads: when planning a route, toll roads will be included.
- ▶ Select one of the settings for toll roads.

#### Ferry connections

You can determine the navigation settings for ferries when planning a route.

- ▶ In the main menu, select **Navigation** → **Settings** → **Route planning** → **Ferry connections**.

You can select:

- Prompt for ferries on route: for every route planned, you will be asked whether a ferry connection should be included.
- Always avoid ferries: when planning a route, ferry connections will be avoided where possible.
- Never avoid ferries: when planning a route, ferry connections will be included.
- ▶ Select one of the settings for ferry connections.

#### Unpaved roads

You can determine the navigation settings for unpaved roads when planning a route.

- ▶ In the main menu, select **Navigation** → **Settings** → **Route planning** → **Unpaved roads**.

You can select:

- Prompt for unpaved roads on my route: for every route planned, you will be asked

whether an unpaved road should be included.

- Always avoid unpaved roads: when planning a route, unpaved roads will be avoided where possible.
- Never avoid unpaved roads: when planning a route, unpaved roads will be included.
- ▶ Select one of the settings for unpaved roads.

### Route overview

You can set the route summary to automatically fade out 10 seconds after the route is planned.

- ▶ In the main menu, select **Navigation** → **Settings** → **Route planning** → **Route overview**.
- ▶ Select **Yes** or **No**.

### Carpool lanes

You can determine the navigation settings for carpool lanes when planning a route. Carpool lanes are only available in certain countries.

- ▶ In the main menu, select **Navigation** → **Settings** → **Route planning** → **Carpool lanes**.

You can select:

- Prompt for carpool lanes: for every route planned, you will be asked whether a carpool lane should be included.
- Always avoid carpool lanes: when planning a route, carpool lanes will be avoided where possible.
- Never avoid carpool lanes: when planning a route, carpool lanes will be included.
- ▶ Select one of the settings for carpool lanes.

### Displaying POIs on the map

You can decide what type of POI categories are shown on the map.

- ▶ In the main menu, select **Navigation** → **Settings** → **Show POI on map** → **Find**.
- ▶ Select POIs.
- ▶ Select whether the POI should be shown in a two or three-dimensional map view.

## Managing POIs

### Adding a POI category

You can create a category for your own POIs.

- ▶ In the main menu, select **Navigation** → **Settings** → **Manage POIs** → **Add POI category**.
- ▶ Enter the name and symbol for the new POI category.

### Deleting a POI category

You can delete the categories for your own POIs.

- ▶ In the main menu, select **Navigation** → **Settings** → **Manage POIs** → **Delete POI category**.
- ▶ Select the POI category to be deleted.

### Adding POIs

You can specify your own POIs.

- ▶ In the main menu, select **Navigation** → **Settings** → **Manage POIs** → **Add POI**.  
If you have not defined any of your own POI categories, you will be prompted to enter a POI category.
- ▶ Select the category for the POI.
- ▶ Enter your own POI as you would a destination entry (▷ page 23).

### Deleting POIs

You can delete your own POIs.

- ▶ In the main menu, select **Navigation** → **Settings** → **Manage POIs** → **Delete POI**.
- ▶ Select the category for the POI.
- ▶ Select and confirm the POI.

### Issuing warning when POI is in vicinity

You can decide whether you wish to receive notification that a POI is in the vicinity.

- ▶ In the main menu, select **Navigation** → **Settings** → **Manage POIs** → **Warning when near POI**.
- ▶ Select a POI category.
- ▶ Set distance for notification of POI and type of notification issued.

### Editing POIs

If you have saved your own POIs, these can be edited.

- ▶ In the main menu, select **Navigation** → **Settings** → **Manage POIs** → **Edit POI**.
- ▶ Select the category for the POI.
- ▶ Customise the POI properties.

### Voice

#### Changing the voice

You can change the voice that is used to give navigation instructions and information.

Either computer-generated voices or voices that have been recorded by professionals can be selected. For voices that have been recorded by professionals, only the basic navigation commands will be spoken.

- ▶ In the main menu, select **Navigation** → **Settings** → **Voice** → **Select a voice**.
- ▶ Select the voice for playback.

#### Specifying a home address

- ▶ In the main menu, select **Navigation** → **Settings** → **Set home location**.
- ▶ Specify your home address as you would a destination entry (▷ page 23).

#### Changing the map colours

You can choose between various colour displays for the map.

- ▶ In the main menu, select **Navigation** → **Settings** → **Change map colours**.
- ▶ Select the desired map display.

### Vehicle symbol

You may change the appearance of the vehicle in the navigation display.

- ▶ In the main menu, select **Navigation** → **Settings** → **Car symbol**.
- ▶ Select the desired vehicle symbol.

### Advanced settings

The advanced settings can be used to determine a variety of display options for the navigation system, such as showing street names or lane images.

- ▶ In the main menu, select **Navigation** → **Settings** → **Advanced**.
- ▶ Select desired settings.

### Changing the map

You can select another map for navigation.

- ▶ In the main menu, select **Navigation** → **Settings** → **Switch map**.
- ▶ Select the desired map.

### Managing saved locations

- ▶ In the main menu, select **Navigation** → **Settings** → **Manage saved locations**.

**Troubleshooting**

Problem	Possible causes/consequences and ► Solutions
There is no map shown in the navigation system.	The SD card with the map data is missing or damaged. ► Check to see that the SD card is inserted (▷ page 17).
The position of the vehicle in the navigation system does not match the vehicle's actual position.  The GPS symbol in the display is grey or yellow.	The GPS reception is poor. The vehicle cannot be accurately pinpointed. ► Drive the vehicle to another location where the GPS reception is better.
The road's course in the navigation system no longer coincides with the actual road.	The map data is out of date. ► Carry out a map update.
There is no traffic information shown in the navigation system.	Route guidance not active. ► Check whether route guidance is active. Select a destination and start navigation (▷ page 23).  HD Traffic is not available or the subscription for HD Traffic has expired. Check whether HD Traffic is available for the country you are in or extend the subscription for HD Traffic (▷ page 51).
During route guidance, there is no voice output for the navigation commands.	The junction was not detected by the navigation system. The map data may be out of date. ► Check whether route guidance is active. Select a destination and start navigation.  Speech playback for the navigation commands is switched off. ► Activate speech playback (▷ page 32).

## Multimedia menu – overview

In the multimedia menu, you can call up the following functions:

- AM/FM/DAB radio
- Music playback (USB, SD card, AUX and Bluetooth®)
- Image playback (USB and SD card)
- Video playback (USB and SD card)



- ▶ In the main menu, select **Multimedia**.

## Radio

### Switching on radio mode

- ▶ In the main menu, select **Multimedia** → **Radio**.  
You will hear the last station played on the last waveband selected.

### Display mode

#### General notes

In radio mode, you can choose between three different display modes. Depending on the display mode, a number of functions may be carried out.

## Display mode (FM and DAB)



- ① Selects the radio mode (AM/FM/DAB) and preset group (FM/DAB)
- ② Selects the previous station
- ③ Selects the next station
- ④ Calls up the context menu
- ⑤ Selects the **Frequency** display mode (AM/FM)
- ⑥ Selects the **List** display mode (FM/DAB)
- ⑦ Selects the **Preset** display mode
- ⑧ Station currently playing

- ▶ **To scroll through the station list:** swipe your finger upwards or downwards on the touchscreen.
- ▶ **To select a station directly:** tap on the desired station on the touchscreen.

## Frequency display mode (AM and FM)



- ① Selects the FM waveband and preset group
- ② Increases/reduces the frequency in 0.05 MHz (FM) or 1 kHz (AM) increments
- ③ Station search, forwards/backwards
- ④ Calls up the context menu
- ⑤ Selects channels manually
- ⑥ Station currently playing

- ▶ **To manually set the station:** use your finger to slide controller ⑤ to the left or right.

### Display mode presets



- ① Selects the radio mode (AM/FM/DAB) and preset group (FM/DAB)
- ② Station presets
- ③ Context menu
- ④ Station currently playing

- ▶ **To store a station:** select a stored station ②, then press and hold it until a tone sounds. The station currently playing replaces the previously saved station.
- ▶ **To select a station directly:** tap the desired station on the touchscreen.

### Context menu +

Via the context menu, you can call up the following functions in radio mode:

- ▶ **To change the media source:** select + → **Change source**.
- ▶ Select a different media source, such as USB.
- ▶ **To add to Favourites:** select + → **Add to Favourites**.  
The station currently playing is added to Favourites.
- ▶ **To save the station:** select + → **Save as preset**.  
A signal sounds. The station currently playing is stored. For every waveband, you can save up to 6 stations as presets.

- ▶ **To display radio text:** select + → **Show radio text**.

If the station currently playing has radio text, this will be shown in the display.

- ▶ **To change the radio settings:** select + → **Settings**.

The settings menu for media playback is displayed (▷ page 43).

## DAB (digital radio)

### Information on DAB

- ❗ Portable electronic devices in the vehicle may seriously impair radio and DAB radio reception.

Digital radio or DAB (Digital Audio Broadcasting) is a digital transmission standard optimally designed for the mobile reception of radio transmissions. Several programmes are combined into so-called ensembles and transmitted on a single frequency. Some stations only transmit programmes at certain times. If you have selected a station that has been subsequently removed from the ensemble, it will no longer be received. You will continue to receive the other programmes in the ensemble. Select either a different programme or a different ensemble.

- ❗ DAB cannot be received everywhere in Europe.

For DAB radio, only the Presets (▷ page 37) display mode and the List (▷ page 36) display mode are possible.

### DAB radio services

In DAB radio mode, it is only possible to select various radio services via the context menu.

- ▶ Select + → **DR services**.  
A selection of radio services appears.

You can select:

- **EPG** (Electronic Programme Guide): programme information for the current station is displayed.
- **Intellitext:** short texts on the current broadcast are displayed, e. g. information on the song currently being played or news

texts. You can switch Intellitext on and off using the radio settings (▷ page 43).

- **Slide show:** displays images to accompany the current broadcast.

### Special DAB functions

In DAB radio mode, special functions are available which can be activated or deactivated:

- **Simulcast:**

If this function is activated, the smart Media-System automatically switches to the corresponding FM station if DAB reception is poor.

- **i-Announcement**

The smart Media-System displays information for the categories selected.

- ▶ **To change DAB settings:** select  → **Settings**.

The settings menu for media playback is displayed (▷ page 43).

## Media

### Introduction

In the **Media** menu, you can use the smart Media-System to play music files from external media sources.

The following media sources are available:

- USB stick
- SD card
- AUX port
- Devices connected via Bluetooth®

### Notes on media mode

#### Permissible data carriers

The smart Media-System supports the following data carriers:

- SD and SDHC cards (max. storage capacity 32 GB)
- USB memory sticks (USB 2.0 or USB 3.0 with 64 GB max. storage capacity)

USB hard drives are not supported.

#### Permissible formats

The smart Media-System supports the following audio formats:

- MP3
- WMA
- AAC formats:  
.aac, .m4a, .m4b, .m4p, .m4v, .m4r, .mp4 and .3gp
- OGG Vorbis (.ogg, .oga)
- PCM 16 bit (.wav, .pcm)

#### Permissible bit and sampling rates

The smart Media-System supports the following type of MP3 files:

- fixed and variable bit rates from 32 kbit/s to 320 kbit/s
- sampling rates of 32 kHz to 48 kHz

The smart Media-System supports the following type of WMA files:

- fixed bit rates from 5 kbit/s to 384 kbit/s
- sampling rates of 16 kHz to 48 kHz

The smart Media-System does not support any of the following WMA files:

- DRM (Digital Rights Management) encrypted files
- variable bit rate
- WMA Pro
- 5.1 Surround

- ❗ Only use tracks with a bit rate of at least 128 kbps and a sampling rate of at least 44.1 kHz. Lower rates can cause a noticeable deterioration in quality.

#### Data structure of the data carrier

##### Folder structure

When you create a disc with compressed music files, the tracks can be organised in folders. A folder may also contain subfolders. The disc may contain no more than eight directory levels. Files beyond the eighth level will not be recognised by the system.

##### File names

When you create a disc with compressed music files, you can assign names to the tracks and folders. If MP3 or WMA files are stored in the

root directory itself, the root directory will also be treated as a folder.

You should observe the following when assigning track names:

- track names must have at least one character.
- track names must have a supported audio file format extension, such as MP3 or aac.
- there must be a full stop between the track name and the extension. Example of a correct track name: "Title1.MP3".

### File system and partitioning

The smart Media-System only recognises the first partition of the storage medium. The partition must be formatted as FAT or FAT32.

### Notes on copyright

Audio files that you create or play back are subject to copyright protection. In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder. Make sure that you know about the applicable copyright regulations and that you comply with these.


## Starting media playback

### Automatic playback

If you insert a USB stick or SD card, the smart Media-System will start media playback automatically. If playable music files are found, they will be played by the smart Media-System.

### Selecting the media source

- ▶ In the main menu, select **Multimedia** → **Media**.  
The list of external media sources will be shown.

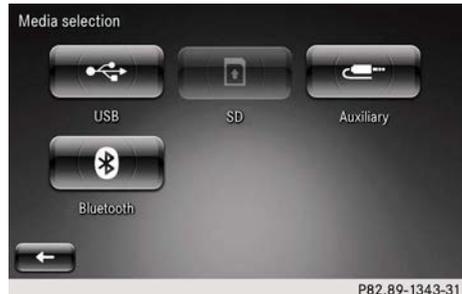

- ❗ You may only select media sources that are connected.

- ▶ Choose between **USB**, **SD**, **Aux** or **Bluetooth**.

## Functions during playback

### Playback of USB memory stick or SD card



Sample display for playback of USB memory stick

- 1 Restarts playback of current track/ selects previous track/rewind
- 2 Selects the next track/fast forward
- 3 Stops/continues playback
- 4 Switches repeat function on/off
- 5 Switches random playback on/off
- 6 Calls up the context menu
- 7 Displays the playlist
- 8 Makes a new selection
- 9 Progress bar for the currently playing track

- ▶ **To resume playback at any point in the track:** use your finger to slide controller ⑨ left or right.
- ▶ **To control track playback using the touchscreen:** swipe your finger to the right.  
The current track is played from the beginning or the previous track is played.
- ▶ Swipe your finger to the left.  
The next track is played.

You can also control playback of the track using the ▲ or ▼ buttons on the smart Media-System (▷ page 11).

### Bluetooth® audio playback



- ① Selects a new track
  - ② Restarts playback of the track/selects previous track
  - ③ Stops/continues playback
  - ④ Selects the next track
  - ⑤ Displays the playlist
  - ⑥ Calls up the context menu
- ⓘ The available functions depend on the connected Bluetooth® device.
  - ▶ **To control track playback using the touchscreen:** swipe your finger to the right.  
The current track is played from the beginning or the previous track is played.
  - ▶ Swipe your finger to the left.  
The next track is played.

You can also control playback of the track using the ▲ or ▼ buttons on the smart Media-System (▷ page 11).

### Context menu

- ⓘ The context menu functions depend on the respective playback source.

Via the context menu, you can call up the following functions in media mode:

- ▶ **To change the media source:** select → **Change source.**
- ▶ Select a different media source, such as USB.
- ▶ **To switch random playback on or off (only USB stick and SD card):** select → **Enable shuffle** or **Disable shuffle.**  
The smart Media-System plays all tracks on the medium in random order.
- ▶ **To switch track repeat on/off (only USB stick and SD card):** select → **Enable repeat** or **Disable repeat.**  
The smart Media-System repeats the track currently being played.
- ▶ **To display track details (USB stick and SD card only):** select → **Song details.**  
A summary of information for the track currently being played is shown.
- ▶ **To connect a Bluetooth® device (Bluetooth® audio only):** select → **Find new device.**  
A list of available Bluetooth® devices is displayed (▷ page 47).  
You can connect a device to reproduce Bluetooth® Audio in addition to a mobile phone.
- ▶ **To change the audio settings:** select → **Sound settings.**  
The settings menu for the media mode will be shown (▷ page 44).

### Searching for a track

You can search for a track on the data medium.

- ▶ Select **New selection** → **Folders.**  
The current playlist is displayed.
- ▶ Select **Find.**  
A keyboard is shown.
- ▶ Enter the name or part of the name of the track you are looking for and then select it from the list.

## Category list

You can choose from a number of categories when playing music files.

- ▶ Select **New selection**.  
A selection of categories will be displayed.



- ▶ Select one of the categories for playback.

**i** The categories are available as soon as the entire media content has been read and analysed.

Additional categories are available when an Apple® device is connected.

## Pictures

### Introduction

In the **Pictures** menu, image files that have been saved to an SD card or USB memory stick can be viewed on the smart media system. Pictures can be shown in the image file formats JPEG, GIF, PNG and BMP.

Depending on the setting, the pictures will be displayed as part of a slide show or as individual pictures.

### Starting image playback

- ▶ Insert the SD card or connect the USB stick.
- ▶ In the main menu, select **Multimedia**, → **Pictures**.
- ▶ Select **USB** or **SD** as the media source.
- ▶ Select the folder/picture to be displayed. The image playback starts on the smart media system.

## Functions during the image playback

- ▶ **To switch between pictures:** glide your finger to the left or right on the touchscreen or select **◀** or **▶**.
- ▶ **To switch from normal to thumbnail view:** select **Thumbnails**.
- ▶ **To switch from thumbnail to normal view:** select a thumbnail.
- ▶ **To specify a new selection of images:** select **New selection**.  
The pictures from the currently selected folder will be shown.
- ▶ Select the pictures to display.
- ▶ **To display the picture in full-screen mode:** select **Full screen**.  
All controls are hidden.
- ▶ Tap the touchscreen to briefly display the controls.

### Context menu **+**

The functions in the context menu are dependent on the current playback mode. Via the context menu, you can call up the following image playback functions:

- ▶ **To show pictures as a slide show:** **+** → Select **Slide show**.
- ▶ **To permanently switch from full screen to normal view:** select normal view.
- ▶ **To enlarge the image:** select **+** → **Zoom in**.
- ▶ **To change the media source:** select **+** → **Change source**.
- ▶ Select a different media source, such as USB.
- ▶ **To change the image settings:** select **+** → **Image settings**.  
The settings menu for the image playback will be shown (slide show delay, default view).

## Video

### Introduction

In the **Video** menu, video files that have been saved to an SD card or USB stick can be viewed on the smart Media-System.

- ▶ **i** Ideally, you should use video files of format MP4 with a resolution of 800 x 480, a bit rate below 4 mbit/s, audio track AAC LC with a sampling rate of 44.1 kHz, 128 kbit/s, 16 bit.

All videos in the folder are played one after the other.

- ▶ **i** The size of the video file may have an impact on the performance of the system. A maximum length of 5 minutes is recommended for videos.

### Starting video playback

- ▶ Insert the SD card or connect the USB stick.
- ▶ In the main menu, select **Multimedia** → **Video**.
- ▶ Select **USB** or **SD** as the media source.
- ▶ Select and confirm the folder/video. Playback of the video starts.

### Functions during playback



- ▶ **To select the next/previous video:** select **⏪** or **⏩**.
- ▶ **To stop/continue playback:** select **⏸**.
- ▶ **To show the video in full screen mode:** select **Full screen**.
- ▶ **To select a new video:** select **New selection**.  
The folder that contains all the videos is shown.
- ▶ Select the video for playback.

- ▶ **To control video playback using the touchscreen:** glide your finger to the right. The previous video is played.
- ▶ Glide your finger to the left. The next video is played.

You can also control playback of the track using the **⏮** or **⏭** buttons on the smart Media-System (> page 11).

### Context menu **+**

Via the context menu, you can call up the following video playback functions:

- ▶ **To change the media source:** select **+** → **Change source**.
- ▶ Select a different media source for videos, such as USB.
- ▶ **To select the video settings:** select **+** → **Video settings**.  
The settings menu for video playback (default view) will be shown.

## AUX

### Introduction

In the **AUX** menu you can play an audio source connected to the AUX port in the centre console (> page 12).

### Starting playback

- ▶ Select **Multimedia** → **AUX** in main menu. The currently connected audio source plays.

### Functions during playback

Via the context menu, you can call up the following functions in media mode:


- ▶ **To change the media source:** select **+** → **Change source**.
- ▶ Select a different media source, such as USB.
- ▶ **To change the audio settings:** select **+** → **Sound settings**.  
The settings menu for the media mode will be shown (> page 44).

## Settings

### Overview

You can change the following settings in the settings menu:

- Sound
- Radio
- Media
- Pictures
- Video

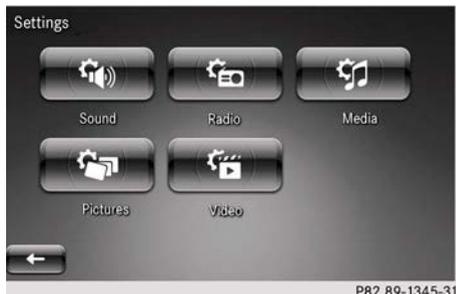

- ▶ In the main menu, select **Multimedia** → **Settings**.

### Sound settings

#### Balance/fader

##### smart fortwo

- ▶ In the main menu, select **Multimedia** → **Settings** → **Sound** → **Balance**.  
A representation of the vehicle interior is shown.
- ▶ Select **Manual** and position the crosshair for **Balance** on the left or right.
- ▶ Confirm the new selection with **Done**.
- ▶ **To reset the balance to the default value:** select **Neutral**.
- ▶ Confirm the new selection with **Done**.

##### smart forfour

- ▶ In the main menu, select **Multimedia** → **Settings** → **Sound** → **Balance/Fader**.  
A representation of the vehicle interior is shown.
- ▶ Select **Manual** and place the **Balance/Fader** crosshair over the desired position.

- ▶ Confirm the new selection with **Done**.
- ▶ **To reset the balance/fader to the default values:** select **Whole vehicle**.
- ▶ Confirm the new selection with **Done**.

#### Bass/treble

- ▶ In the main menu, select **Multimedia** → **Settings** → **Bass/Treble**.  
The option to choose between **Neutral** or **Manual** will be shown.
- ▶ **To set a neutral sound:** select **Neutral**.  
Audio is played without increasing the bass or treble.
- ▶ Confirm the new selection with **Done**.
- ▶ **To set the bass or treble individually:** select **Manual**.  
You can adjust the bass and treble separately.
- ▶ Confirm the new selection with **Done**.

#### Switching Bass boost arkamys® on/off

This function is not available for vehicles with the JBL sound system.

With the Bass boost arkamys® function, the bass is emphasised during playback.

- ▶ In the main menu, select **Multimedia** → **Settings** → **Bass boost Arkamys**.  
The enabled function is indicated by a tick.
- ▶ Confirm the new selection with **Done**.

#### Radio settings

- ▶ **To switch the search for alternative frequencies on/off:** in the main menu, select **Multimedia** → **Settings** → **Radio** → **AF (Alternative frequency)**.  
The enabled function is indicated by a tick.  
If the function is activated, the smart Media-System will automatically search for a station's alternative frequencies in order to find the best possible quality of reception.
- ▶ Confirm the new selection with **Done**.

- ▶ **To switch i-Traffic on/off:** in the main menu, select **Multimedia** → **Settings** → **Radio** → **i-Traffic (Traffic program)**. The enabled function is indicated by a tick.  
If the function is activated, the smart Media-System will receive traffic reports.
- ▶ Confirm the new selection with **Done**.
- ▶ **To switch PTY on/off:** in the main menu, select **Multimedia** → **Settings** → **Radio** → **PTY (Program type)**. The enabled function is indicated by a tick.  
If the function is activated, the smart Media-System will display the RDS station programme type, such as Classical.
- ▶ Confirm the new selection with **Done**.
- ▶ **To switch Simulcast on/off (DAB only):** in the main menu, select **Multimedia** → **Settings** → **Radio** → **Simulcast Information**. The enabled function is indicated by a tick.  
If the function is activated, the smart Media-System automatically switches to the corresponding FM station if DAB reception is poor.
- ▶ Confirm the new selection with **Done**.
- ▶ **To switch i-Announcements on/off (DAB only):** in the main menu, select **Multimedia** → **Settings** → **Radio** → **i-Announcement**. The menu for i-Announcements opens.
- ▶ Select the category for i-Announcements, e.g. **Event Information**. The category selected is indicated by a tick.  
The smart Media-System displays information for the categories selected.
- ▶ Confirm the new selection with **Done**.
- ▶ **To update the station list:** in the main menu, select **Multimedia** → **Settings** → **Radio** → **Update radio list**. The list of stored stations is updated.
- ▶ Confirm the new selection with **Done**.

## Media settings

- ▶ **To switch track repeat on/off:** in the main menu, select **Multimedia** → **Settings** → **Media** → **Repeat**. The enabled function is indicated by a tick.  
If the function is activated, the smart Media-System will repeat the track currently playing.
- ▶ Confirm the new selection with **Done**.
- ▶ **To switch random playback on/off:** in the main menu, select **Multimedia** → **Settings** → **Media** → **Shuffle**. The enabled function is indicated by a tick.
- ▶ Confirm the new selection with **Done**.
- ▶ **To show or hide the album cover:** in the main menu, select **Multimedia** → **Settings** → **Media** → **Display album cover**. The enabled function is indicated by a tick.  
If the function is activated, the smart Media-System will display the cover of the album currently being played. The cover must be saved in the respective file.
- ▶ Confirm the new selection with **Done**.
- ▶ **To manage Bluetooth devices:** (▷ page 48)

## Picture settings

- ▶ **To set the display time:** in the main menu, select **Multimedia** → **Settings** → **Pictures** → **Slide show delay**.
- ▶ Use the slide controller or / to set the desired time between the display of two pictures.
- ▶ Confirm the new selection with **Done**.
- ▶ **To set the default view for image playback:** in the main menu, select **Multimedia** → **Settings** → **Pictures** → **Default view**.
- ▶ Select **Normal view** or **Full screen**. The view selected is used as a default setting for displaying pictures.
- ▶ Confirm the new selection with **Done**.

## Video settings

- ▶ **To set the default view for video playback:**  
in the main menu select **Multimedia** → **Settings** → **Video**.
- ▶ Select **Normal view** or **Full screen**.  
The view selected is used as a default setting for playing videos.
- ▶ Confirm the new selection with **Done**.

### Important safety notes

#### WARNING

Operating communications equipment integrated into the vehicle while driving will distract you from traffic conditions. You could then lose control of the vehicle. There is a risk of an accident.

Only operate these devices if road traffic conditions permit. If you are unsure about the surrounding conditions, pull over to a safe location and make entries only while the vehicle is stationary.

#### WARNING

If you operate RF transmitters incorrectly in the vehicle, the electromagnetic radiation could interfere with the vehicle electronics, e.g.:

- if the RF transmitter is not connected to an exterior aerial
- the exterior aerial has been fitted incorrectly or is not a low-reflection type

This could jeopardise the operating safety of the vehicle. There is a risk of an accident.

Have the low-reflection exterior aerial fitted at a qualified specialist workshop. When operating RF transmitters in the vehicle, always connect them to the low-reflection exterior aerial.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

Excessive levels of electromagnetic radiation may cause damage to your health and to the health of others.

There is scientific discussion surrounding the possible health risks posed by electromagnetic fields. You can reduce this risk by using an exterior aerial.

Therefore, only use mobile communication equipment if it is connected to the exterior aerial of the vehicle.

### General notes

#### Function restrictions

You will not be able to use the telephone via the smart media system in the following situations:

- if the mobile phone is switched off
- if Bluetooth® is switched off on the mobile phone
- if the mobile phone is not logged into a mobile phone network
- if the Bluetooth® function is switched off on the smart media system

The telephone automatically tries to log on to a network. If no network is available, you may not even be able to make a **999** or **112** emergency call.

#### "999" or "112" emergency call

The following conditions must be fulfilled in order to make a **999** or **112** emergency call:

- a valid and operational SIM card must be inserted in the mobile phone.
- the mobile phone must be switched on.
- the PIN for the mobile phone has been entered.
- a mobile phone network is available.

If you cannot make an emergency call, you must arrange rescue measures yourself.

-  The **999** or **112** emergency call number is a public service. Any misuse is punishable by law.

### Telephone menu overview



You can use the telephone menu to make calls, view the call history and change settings.

## Connecting a phone

### Conditions

For telephony via the Bluetooth® interface, you must have a Bluetooth®-capable mobile phone. The mobile phone must support Hands-Free Profile 1.0 or above. An overview of compatible mobile phones can be found here: <http://www.smart.com/connect>.

### smart Media-System:

- ▶ Activate Bluetooth®.

### Mobile phone:

- ▶ Switch on the mobile phone and enter the PIN when prompted to do so (see the manufacturer's operating instructions).
- ▶ Activate Bluetooth® and, where applicable, Bluetooth® visibility for other devices (see the manufacturer's operating instructions).

This visibility is for restricted periods of time on some mobile phones (see the manufacturer's operating instructions).

- ▶ Where applicable, set the Bluetooth® device name for the mobile phone.

The Bluetooth® device names may be identical for all the manufacturer's products. To ensure you can clearly identify your mobile phone, changing the device name is recommended (see the manufacturer's operating instructions). The name can be freely selected.

Further information on allowing or preventing automatic downloading of the phone book (▷ page 48).

The battery of the mobile phone should always be kept sufficiently charged in order to prevent malfunctions.

- ❗ Some displays, such as the signal strength or charge indicator, will depend on the supported version of the Hands-Free Profile.

## Connecting a mobile phone for the first time (authorising)

If you are using the smart Media-System for the first time and select the telephone menu, a display message will appear. You will be requested to set up a Bluetooth® connection.

- ▶ If you wish to set up a Bluetooth® connection, select **Yes**.  
The smart Media-System will search for visible mobile phones and display these in a list.
- ▶ Select the desired mobile phone.  
Depending on the mobile phone manufacturer, a display message will appear. You will be prompted to enter a security code on the mobile phone or to accept confirmation of access.
- ▶ Enter the security code on the phone or confirm access.  
The Bluetooth® connection is established.  
If the mobile phone is in range of the smart Media-System, it will be connected automatically.

## Connecting a new mobile phone (authorising)

- ▶ Select **Handset** → **Preferences** → **Manage devices**.  
The smart Media-System shows a list of visible mobile phones.
- ▶ Select the mobile phone for authorisation.
- ▶ Where applicable, enter the security code on the phone or confirm access.

## Deleting a mobile phone

- ▶ Select **Handset** → **Preferences** → **Manage devices**.
- ▶ Select **[+]** → **Delete device(s)**.
- ▶ Select and confirm the mobile phone that is to be deleted from the list.  
The mobile phone will be deleted from the list of authorised mobile phones.

### Establishing or terminating a Bluetooth® connection

You can disconnect the active Bluetooth® connection for a mobile phone or establish a connection to another authorised phone.

- ▶ Select **Handset** → **Preferences** → **Manage devices**.

The smart Media-System shows a list of authorised mobile phones.

- ▶ **To terminate the Bluetooth® connection:** select **+** → **Disconnect all devices**. The Bluetooth® connection to all connected mobile phones will be terminated.
- ▶ **To change the current Bluetooth® connection:** select a mobile phone from the list. A Bluetooth® connection to the mobile phone selected will be established. The connection to the previously connected mobile phone will be automatically terminated.

## Telephone operation

### Making a call

There are different options for making a call:

- Select a contact from the phone book (▷ page 48)
- Select a phone number from the call history (▷ page 49)
- Enter a phone number using the keypad (▷ page 49)

### Incoming call

If a call is incoming, one of the following will appear on the display:

- Name of caller, if already in phone book
- Number of caller, if not already in phone book
- **Private number**, if caller identification is switched off.
- ▶ **To accept a call:** select **Pick up**.

or

- ▶ Press the  button on the multifunction steering wheel (▷ page 10).
- ▶ **To reject a call:** select **Refuse**. The call will be forwarded to voicemail.

### During the call

- ▶ **To adjust the call volume:** press **+** or **-** on the multifunction steering wheel.
- or
- ▶ Turn  the control knob on the smart Media-System (▷ page 11).
- ▶ **To end a call:** select **End call**.
- or
- ▶ Press the  button on the multifunction steering wheel (▷ page 10).
- ▶ **To put a caller on hold:** select **+** → **Put on hold**.
- ▶ **To continue a call on hold:** press **Resume**.
- ▶ **To pass back a call :** select **+** → **Handset**. The call will be passed back to the mobile phone.

**i** During the phone call, you can also use other functions of the smart Media-System.

## Phone book

### Introduction

If you have connected a mobile phone to the smart Media-System, the phone contacts will be synchronised with the smart Media-System. A maximum of 500 contacts can be transferred to the smart Media-System. A contact that only contains an email address will also be counted as a phone book entry.

- ▶ **To call up the phone book:** select **Phone** → **Phonebook**. A list of contacts appears.
- ▶ **To search for a contact:** select **Search**. A keyboard appears that can be used to enter the required contact.



- ▶ Select the required contact from the list.
- ▶ Select the contact's telephone number.  
The call is connected.

### Updating the phone book


You can update your contacts again after establishing a Bluetooth® connection.

- ▶ Select **Handset** → **Phonebook**.
- ▶ Select **+** → **Update phone data**.  
The contacts in the smart Media-System will be updated.

### Adding favourites

You can add a contact to your list of favourites.

- ▶ Select **Handset** → **Phonebook**.
- ▶ Select the required contact from the list.

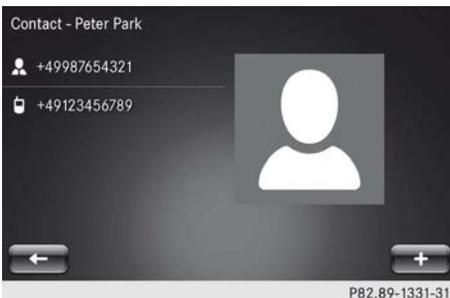


- ▶ Select **+** **Add to Favourites**.
- ▶ Select a phone number

### Dial number

You can enter a telephone number using the keypad on the smart media system.

- ▶ Select **Phone** → **Dial number**.

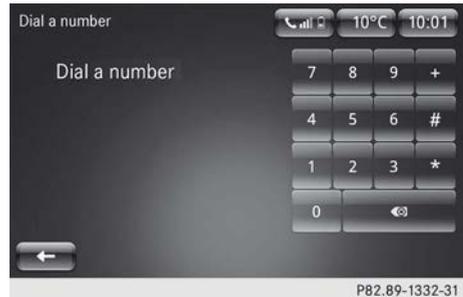


- ▶ Enter the number using the number pad.
- ▶ Select **Call**.

### Call history

You can display the call history for your mobile phone.

- ▶ Select **Phone** → **Call logs**.  
A list of the calls that have been received, taken and missed will be shown.

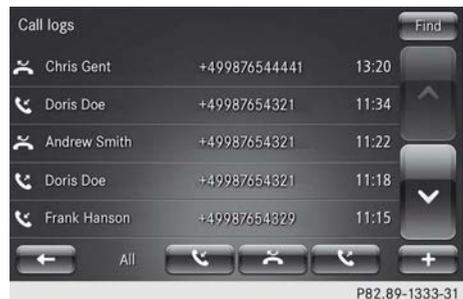

- ▶ **To sort the call history:** select the symbol for received, taken and missed calls or select **All**.  
The call history will be sorted according to the respective category.
- ▶ **To call a contact:** select the contact from the list.
- ▶ **To update the call history:** select **+** → **Update phone data**.

- ▶ **To search for a call:** select **Find**.  
An on-screen keyboard is shown.
- ▶ Enter the search text.

## Voice mail

You can use this function to call your voicemail. If you select this function, your voicemail number will be dialled.

If you have not yet configured voicemail, you will be requested to do so.

- ▶ Select **Phone** → **Voice mail**.



- ▶ Enter the voicemail number using the numeric pad.
- ▶ Select **Done**.  
The mailbox is set up and the mailbox number is dialled.

## Settings

### Managing devices

In the **Manage devices** menu, you can add and remove mobile phones, or establish and disconnect Bluetooth® connections.

- ▶ Select **Phone** → **Settings**.
- ▶ Select **Manage devices**.

### Volume

You can set the volume of the hands-free setting and the ring tone.

- ▶ Select **Phone** → **Settings**.
- ▶ Select **Sound levels**.

### Voicemail configuration

- ▶ Select **Phone** → **Settings**.
- ▶ Select **Voice mail configuration**.  
The display for the voicemail configuration will be shown (▶ page 50).

### Activating and deactivating Bluetooth®

- ▶ Select **Phone** → **Settings**.
- ▶ Select **Turn Bluetooth on**.  
A tick indicates the activated setting.

### Downloading telephone data automatically

If this function is activated, the telephone book contacts will be automatically synchronised with the smart Media-System when connecting.

- ▶ Select **Phone** → **Settings**.
- ▶ Select **Automatically download phone data**.  
A tick indicates the activated setting.

For some mobile phones, access to the phone data must first be confirmed or authorised by the user before the automatic download can continue.

## General instructions for the data connection

The smart Media-System uses a mobile phone connection for data connection.

Please take note of the following information when using data services:

- The mobile connectivity and built in SIM card for this vehicle can only be used for data services offered by certain third parties, as well as Daimler AG, via the smart Media-System for use in the vehicle. The use of data services requires the conclusion of separate agreements between the vehicle user and the respective provider. Voice service usage is not permitted. As such, the SIM card must be permanently installed as factory equipment.
- The mobile communications connectivity and the SIM card may only be used responsibly in accordance with the applicable laws and other legal requirements of the corresponding countries, insofar as this is within the power of the vehicle user.
- Development, reproduction, decompiling or disassembly the SIM-card are not allowed. Statutory authority remains unaffected.

Failure to follow the above instructions, depending on the severity of non-compliance, can in some cases lead to temporary or permanent deactivation of the mobile connection and the SIM card, in particular to protect Daimler AG and its contractual partners from negative legal consequences arising from non-compliance.

The availability of mobile connectivity in individual countries depends on the existence of such mobile service agreements with local mobile network providers; availability can therefore change from time to time.

The maximum period of validity for the mobile connectivity is 15 years from the time of installation in the vehicle.

## Services menu – overview

In the services menu, the following functions may be carried out:

- Call up Apps (as available)
- Call up and manage TomTom Services<sup>2</sup>
- Change settings
- Call up MirrorLink™



- ▶ In the main menu, select **Services**.

## Installing Apps

If available, apps may be used on the smart Media-System. This will require registration.

In order to install apps, you need to remove the SD card (> page 17) from the vehicle and insert it into a PC. Further information is available at any smart Centre or at <http://www.smart.com>.

## TomTom Services

### Activating TomTom Services

If you are using TomTom Services for the first time, they have to be activated first. If TomTom Services are not yet activated, the **Activate my services** button will be displayed in the main menu and **Services** menu. When they are selected, you can approve or reject activation of the TomTom Services.

<sup>2</sup> TomTom Services are services of TomTom N.V.

Conditions for activating the TomTom Services:

- the SD memory card for navigation is inserted (▷ page 17).
  - a GPS signal is available (▷ page 62).
  - the time is set (▷ page 61).
  - the data connection is active (▷ page 62).
- ▶ **To activate TomTom Services:** select **Activate my services**.

A window with a prompt for data sharing appears.

- ▶ Confirm data sharing with **Yes**.  
A window confirming the activation of services appears.
- ▶ Confirm activation of services with **OK**.
- ▶ In the main menu, select **Services** → **TomTom Services**.  
A window appears with a legal notice.
- ▶ Confirm notice with **I agree**.

**i** The TomTom Services are not immediately available after activation under certain circumstances.

In that case: leave the vehicle, lock it and wait for approximately 15 minutes. Subsequently, call up the TomTom Services again.

**i** TomTom Services functions are not available in all countries. TomTom N.V. can extend your service to other available countries.

Some TomTom Services are only available in certain countries, as permitted by law. Legal requirements are subject to change. For further information enquire at any smart centre.

TomTom Services will be available for three years from the smart Media-System activation. The following TomTom Services come preinstalled.

- HD Traffic
- radar cameras (not available in all countries)
- weather
- TomTom Places
- QuickGPSfix

## Calling up TomTom Services

You can call up TomTom Services that have been installed in the TomTom Services menu.

- ▶ In the main menu, select **Services** → **TomTom Services**.  
The TomTom Services installed on the device are displayed.
- ▶ Select the desired TomTom Service.

## Settings

### Overview

You may call up the following functions in the settings menu:

- Display or call up Apps via the **Applications manager**
- Manage **TomTom Services**
- **Update applications**
- Change the **Data sharing settings**



- ▶ In the main menu, select **Services** → **Settings**.

## Applications manager

If available, you can also display or call up the Apps for the smart Media-System.

- ▶ Select **Applications manager**.  
The Apps installed on the SD card are shown in the smart Media-System.
- ▶ **To display the disc space:** select **+** **Disk space status**.  
The available and occupied disc space will be shown on a diagram.

## TomTom Services

The **TomTom Services** menu can be used to switch to the TomTom Services (> page 51).

## Data sharing settings

If you start the smart Media-System without previously approving data sharing, a corresponding message is shown during the starting procedure. You can approve or refuse data sharing any time.

**Data sharing settings** is used to determine whether or not your trip data may be communicated to service or information providers.

- ▶ Select **Data sharing settings**.  
A text for your consent to share data is shown. You will be asked to confirm your consent to share the data outside the vehicle.
- ▶ **To confirm or reject:** select **Yes** or **No**.
- ▶ **To display further information about data sharing:** select **About**.
- ▶ **To display the text in another language:** select the language.

## MirrorLink™

### About MirrorLink™

MirrorLink® is standard for the connection between the smart Media-System and your mobile phone. With MirrorLink®, the content of the display on your mobile phone can be displayed in the smart Media-System.

MirrorLink™ is available for mobile phones with the "Android" operating system. The availability of MirrorLink™ and MirrorLink™ Apps can vary depending on the country. Button support in the vehicle depends on the mobile phone and the available Apps.

An overview of compatible mobile phones and available Apps can be found at <http://www.smart.com/connect>.

- ❗ Some applications are deactivated when the vehicle is in motion.

## Conditions

- The mobile phone must support MirrorLink® version 1.1 and above.
- The mobile phone must be switched on.
- A MirrorLink™ certified App must be installed on the phone.
- The mobile phone is connected to the smart Media-System via a suitable USB cable.
- The time is set on the smart Media-System (> page 61).

## Setting up a connection

- ▶ Activate MirrorLink™ on your mobile phone (see the manufacturer's operating instructions).
- ▶ Connect a mobile phone with a USB cable to the USB socket in the centre console. A prompt appears asking you whether you would like to use MirrorLink™ mode.
- ▶ **To start MirrorLink™ mode:** select **yes**. Apps which have been certified for MirrorLink™ will be shown in the smart Media-System display.
- ❗ If you would like to connect the mobile phone for audio playback, for example, select **No**.

Only one mobile phone can be connected via MirrorLink™ to the smart Media-System at any one time.

## Calling up MirrorLink™ Apps

- ▶ In the main menu, select **Services** → **MirrorLink™**. The available Apps will be shown in the smart Media-System display.
- ▶ Select the desired App. A message appears indicating that the display switches to full screen.
- ▶ **To leave full screen display:** press and hold the  button on the smart Media-System until the lower bar is shown.
- ▶ **To leave the display:** select .

- ❗ On the smart Media-System display, an illustration of the buttons of the connected mobile phone will also be displayed in the lower bar.

### Context menu

Via the context menu, you can call up the following functions:

- ▶ **To show App categories:** select  → **Show categories.**  
The available App categories will be displayed.
- ▶ Select the desired category.
- ▶ **To disconnect the MirrorLink™ connection:** select  → **Disconnect.**
- ▶ **To adjust the volume:** select  → **Volume.**
- ▶ **To call up help:** select  → **Help.**

### MirrorLink™ audio playback

If your mobile phone supports this function, you can control audio playback via the buttons on the smart Media-System.

- ▶ **To select the previous track:** press the  button.
- ▶ **Rewind:** press and hold the  button.
- ▶ **To select the next track:** press the  button.
- ▶ **Fast forward:** press and hold the  button.
- ▶ **To mute:** press the  button.

**Troubleshooting**

Problem	Possible causes/consequences and ► Solutions
LIVE services does not work.	Data sharing has not been approved. ► Consent to sharing data
	The vehicle is in a country where TomTom Services are not available. For further information enquire at any smart centre.
	No GPS signal is available . ► Check GPS status (▷ page 62).
	There is no data connection. ► Check network status (▷ page 62).
	The SD memory card for navigation is not inserted . ► Insert SD card for navigation (▷ page 62).
	TomTom Services have not been activated yet. ► Activate TomTom Services (▷ page 51).
TomTom Services work but the service "Radar cameras" is not available.	The vehicle is in a country where the "Radar cameras" service is not permitted. If you travel to a country where the "Radar cameras" service is not permitted, you will be warned automatically. Separate activation is not necessary.

## Important safety notes

### WARNING

Operating mobile communications equipment while driving distracts you from paying attention to traffic conditions. This could also cause you to lose control of the vehicle. There is a risk of an accident.

Use this device only when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

If it is permitted by law to operate communications equipment while the vehicle is in motion, you may only do so if the traffic situation permits. You may otherwise be distracted from the traffic conditions, cause an accident and injure yourself and others.

Do not use the voice control system in an emergency, since the sound of your voice can change in stressful situations. This delays your telephone call unnecessarily.

## Using the voice control system

### General notes

Voice control can be used to carry out the following smart Media-System functions:

- Entering a destination for route guidance
- Making a call
- Starting an application

**i** Speak loudly and clearly when issuing voice commands. The microphone is within the overhead control panel. Observe the messages in the display.

In most cases, you can operate the smart Media-System using the voice control system and touchscreen.

Voice control is available for the German, English, Spanish, French, Italian, Dutch, Portuguese, Russian and Turkish languages.

▶ **To start/cancel voice control:** press the  button on the multifunction steering wheel.

The voice control system prompts you to speak a voice command.

▶ Wait until a warning tone sounds.

**i** If you press the  button during playback (▷ page 11), you can stop the playback. You will immediately hear a signal tone and can speak a command.

### Help function

You can use the voice control help function at any time. The help function provides tips on how to use the voice control system.

▶ Press the  button on the multifunction steering wheel.

Wait until a warning tone sounds.

▶ Say the voice command "Help".

The voice control system displays a list of help functions that you can have displayed.

### Entering a destination in the navigation system

**Example for entering an address with voice commands:**

▶ Press the  button on the multifunction steering wheel.

Wait until a warning tone sounds.

▶ Say the command "Enter address".

The voice control system prompts you to say a full address.

▶ Say the full address with street name, house number and destination.

A list of possible destinations appears.

▶ Say the number of the required destination on the list.

▶ Confirm with "Yes".

Route guidance to the destination starts.

**i** If the voice control system did not understand your command correctly, you will be requested to repeat it. Should there be any further difficulties, you will be guided step-by-step through the voice control system.

### Example for entering a destination using voice commands:

- ▶ Press the  button on the multifunction steering wheel.  
Wait until a warning tone sounds.
- ▶ Say the command "Destination".  
The voice control system asks you for "Destination", "Routes", "Last Destinations" or "Saved Positions".
- ▶ Say the command "Destination".
- ▶ Say the full address with street name, house number and destination.  
A list of possible destinations appears.
- ▶ Say the number of the required destination on the list.
- ▶ Confirm with "Yes".  
Route guidance to the destination starts.
- i** If the voice control system did not understand your command correctly, you will be requested to repeat it. Should there be any further difficulties, you will be guided step-by-step through the voice control system.

### Calling a contact from the phone book

- i** Saying the individual digits of the telephone number is recommended.
  - ▶ Press the  button on the multifunction steering wheel.  
Wait until a warning tone sounds.
  - ▶ Say the command "Telephone".
  - ▶ Say the name of the contact, dictate the phone number or search for the phone number.  
The number is dialled.
- or
- ▶ Say the command "Delete".  
The phone number or contact shown will be deleted from the display.  
You can repeat the telephone number or the name of the contact.
  - i** You can also press the  button and then immediately say a name from the phone book, followed by the command "Call".
  - i** If the voice control system did not understand your command correctly, you will be requested to repeat it. Should there be any further difficulties, you will be guided

step-by-step through the voice control system.

### Starting an application

- ▶ Press the  button on the multifunction steering wheel.  
Wait until a warning tone sounds.
  - ▶ Say the command "Application".
  - ▶ Say the name of the application.  
The application is started.
- or
- ▶ Say the name of the application and the command "Start".  
The application is started.

## Troubleshooting

### >> Voice control system.


Problem	Possible causes/consequences and ► Solutions
<p>The voice control system cannot understand you.</p>	<p>The time for speaking the command has expired.</p> <p>► Press the button on the multifunction steering wheel again.</p>
	<p>You have not operated the voice control system from the driver's seat.</p> <p>Only operate the system from the driver's seat.</p>
	<p>A blower is set to its highest setting or there is wind noise through an open window.</p> <p>Prevent loud noises from interfering.</p>
	<p>You have spoken too exaggeratedly, too loudly or too quietly.</p> <p>State the commands coherently and clearly without exaggerating.</p>
	<p>The voice control system may not know the voice commands.</p> <p>► Say the command "Help".</p> <p>A list of help topics for the voice control system is displayed.</p>

## System menu – overview

In the system settings menu, the following functions may be set:

- Changing the system language
- Changing the display settings
- Setting the sound
- Setting the time
- Safety warnings
- Changing the home screen
- Selecting the on-screen keyboard
- Changing the units of measurement in the system
- Calling up the status and information for the smart Media-System
- Preparing for removal of the SD card
- Resetting to factory settings

**i** If you change a setting in a menu, you will need to select **Done** to apply the new setting.

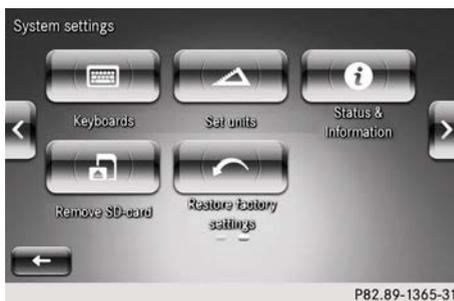

► In the main menu, select **System**.

## Changing the system language

You can change the system language. The language of the spoken navigation commands can be selected independently of the system language (▷ page 61).

- In the main menu, select **System** → **Language**.  
A list of the languages available on the smart Media-System appears.
- Select and confirm the preferred language.

## Display settings

- In the main menu, select **System** → **Display**.  
An overview of the display settings will be shown.
- **To change the brightness of the display in the day view:** move the **Daytime brightness** controller to the left or to the right.

OR

► Press **+** or **-**.

- **To change the brightness of the display in the night view:** move the **Nighttime brightness** controller to the left or to the right.

OR

► Press **+** or **-**.

- **To activate/deactivate the automatic changeover between day/night mode:** select **Automatic day/night mode**.

A tick marks the activated function.

The display will automatically change between day/night mode in accordance with the exterior lighting of the vehicle.

- **To constantly display the night mode:** select **Force night mode**.

A tick marks the activated function.

The night mode display will be shown regardless of the vehicle's exterior lighting.

- **To constantly display the day mode:** Ensure that neither **Force night mode** nor **Automatic day/night mode** are selected. The display's day mode is shown independent of exterior lighting.

## Setting the sound

### Setting the volume

The volume can be separately set for a variety of functions.

- ▶ In the main menu, select **System** → **Sound** → **Sound levels**.

A list appears.

You can choose between the following volume settings:

- **Main volume** the volume of the entire system.
- **Hands-free** the volume of the hands-free system when a mobile phone is connected to the smart Media-System via Bluetooth®.
- **Phone ringtone** the volume of the ring tone when a mobile phone is connected to the smart Media-System.
- **Navigation** the volume of the overall navigation system.
- **Computer voice** the volume of the computer-generated voice.
- **App events** sound level of events triggered by Apps, if available.

- ▶ Select the volume to be changed and move the controller to the left or to the right.

**i** The volumes can also be set using the volume control on the smart Media-System (▷ page 11) or using the **+** and **-** buttons on the steering wheel. For this to be done, one of the above-mentioned sources must be playing.

### Alerts

You can set the volume and properties of audio alerts.

- ▶ In the main menu, select **System** → **Sound** → **Alerts**.
- ▶ **To set the volume for audio alerts:** move the controller to the left or right.
- ▶ **To issue audio alerts when the display is switched off:** select **Keep audio alerts when screen turned off**.

A tick indicates the activated setting.

### Speed-dependent volume

The volume of the playback sources in the vehicle depends on the vehicle speed. You can set the speed-dependent volume.

- ▶ In the main menu, select **System** → **Sound** → **Speed sensitivity volume**.
- ▶ Turn the **Speed sensitivity volume** controller to the left or right. The higher the value, the more the volume of the audio sources increases with the speed of the vehicle.

### Voice output settings

- ▶ You can set the activities and information to be read out by the navigation system. In the main menu, select **System** → **Sound** → **Voice output settings**. A list appears in the display. You can select the following settings:

- **Read early warning instructions:** early voice output for navigation manoeuvres.
- **Read aloud motorway lane instructions:** the navigation commands for recommended lanes are read aloud.
- **Read aloud traffic info when navigating:** incoming traffic information is read aloud along the route.
- **Read aloud foreign street names:** when abroad, the street names are read aloud.
- **Read aloud road numbers:** the road numbers are read aloud during route guidance.
- **Read aloud street names:** the street names are read aloud during route guidance.
- **Read aloud weather information:** if you have the TomTom Weather Report navigation service, information about the weather will be read aloud.
- **Read aloud POI warnings:** if you have activated the nearby POI message function, these messages will be read aloud.
- **Read aloud warnings**
- **Read aloud signposts:** the street signs will be read aloud during route guidance.

### Setting the voice output

- ▶ In the main menu, select **System** → **Sound** → **Voice**.  
A selection of voices is shown.
- ▶ Select the voice for playback.
- ▶ **To listen to a voice:** select **Test**.  
An example of the currently selected voice is played.

Further information (▷ page 34).

## Time settings

### Setting the time

- ▶ In the main menu, select **System** → **Clock** → **Set time**.
  - ▶ To activate/deactivate the automatic time adjustment: select **Automatic time adjustment**.  
A tick indicates the activated setting.
  - ▶ To manually set the time: make sure you have switched off the automatic time adjustment function.
  - ▶ Change the minutes and hours of the time shown.
- i** The automatic time adjustment requires reception of a GPS signal.
- i** If you tap on the time symbol on the home screen (▷ page 14), you also switch to the **Set time** menu.

### Setting the time format

- ▶ In the main menu, select **System** → **Clock** → **Time format**.  
A selection of three different time formats will be displayed.  
You can choose from among the following formats:
    - 18:00
    - 6:00 PM
    - 6:00
 The current setting is indicated by a dot.
  - ▶ Select the desired time format.
- i** The settings for time format and time are also adopted for the instrument cluster.

## Safety warnings

Safety warnings can be switched on or off for certain navigation situations.

- ▶ In the main menu, select **System** → **Safety warnings**.  
A list appears.  
You can select:
  - **Suggest driving breaks**
  - **Warn when driving near schools**
  - **Warn when driving faster than allowed**
  - **Warn when driving faster than a set speed**
 Activated settings are indicated by a tick.
- ▶ Select **Resume**.
- ▶ Select a warning tone for each respective safety warning.

For the **Warn when driving faster than a set speed** function, you must also enter the speed above which the warning tone should sound.

## Selecting the start screen

You can select different home page views (▷ page 14).

- ▶ In the main menu, select **System** → **Home page**.  
A selection and an outline of the home page will be shown. The current setting is indicated by a dot.
- ▶ Select the preferred setting for the home page.

## Keyboards

You can change the layout of the on-screen keyboard.

- ▶ In the main menu, select **System** → **Keyboards**.  
A selection of possible keyboard layouts appears.

You can choose between the following keyboard layouts:

- Latin
- Greek
- Cyrillic

The current setting is indicated by a dot.

You can choose between various keyboard layouts such as ABCD, QWERTY, AZERTY, and QWERTZ using the **Latin** keyboard layout.

## Selecting units

### Units of measurement for distance

All units of measurement for distance in the navigation system can be changed. The units of measurement for distance of other displays are not changed, such as distance displays for the eco score or the on-board computer of the instrument cluster.

- ▶ In the main menu, select **System** → **Set units** → **Distance units**.

A selection appears.

You can select:

- Kilometres
- Miles

### Displaying GPS coordinates

You can change the units for the display of GPS coordinates in the navigation system.

- ▶ In the main menu, select **System** → **Set units** → **GPS co-ordinate display**.

A selection appears.

You can select:

- Degrees (d.d°)
- Minutes (d m.m\')
- Seconds (d° m\'s\''')

## Status & Information

### Version information

Various information relating to the smart media system hardware and software can be displayed.

- ▶ In the main menu, select **System** → **Status & Information** → **Version information**.

### GPS status

You can display the status of the current GPS signal.

- ▶ In the main menu, select **System** → **Status & Information** → **GPS status**.

### Network status

You can display the status and reception strength of the current data connection.

- ▶ In the main menu, select **System** → **Status & Information** → **Network status**.

### Licences

You can display the licences of the Free and OpenSource software used.

- ▶ In the main menu, select **System** → **Status & Information** → **Licences**.

### Copyright

You can display the copyright text for the TomTom software used.

- ▶ In the main menu, select **System** → **Status & Information** → **Copyright**.

## Removing an SD card

Before removing the SD card from the slot in the centre console, you need to do the following:

- ▶ In the main menu, select **System** → **Remove SD-card**.  
A display message appears.
- ▶ Confirm the message with **Yes** or **No**.

## Factory reset

You can reset the smart Media-System to the factory settings. All settings changed in the system will then return to the default values. All destinations, routes and favourites will be deleted.

- ▶ In the main menu, select **System** → **Factory settings**.  
A display message appears.
- ▶ Confirm the message with **Yes** or **No**.



## **Publication details**

### **Internet**

Further information about smart vehicles and about Daimler AG can be found on the following websites:

<http://www.smart.com>

<http://www.daimler.com>

### **Editorial office**

You are welcome to forward any queries or suggestions you may have regarding this manual to the technical documentation team at the following address:

Daimler AG, HPC: R822,  
D-70546 Stuttgart, Germany

Not to be reprinted, translated or otherwise reproduced, in whole or in part, without the written permission of Daimler AG.

### **Vehicle manufacturer**

Daimler AG  
Mercedesstraße 137  
70327 Stuttgart  
Germany

Order no. 6522 047 02  
Part no. 453 584 29 04  
Edition NA2014-11d



984505901R **S6**